PowerLite® Pro Cinema 6020UB
Home Theater Projector

User's Guide

Contents

Introduction 5

Projector Parts 6

Remote Control 8

Optional Accessories 9

Registration and Warranty 9

Using This Manual 10

Setting Up the Projector 11

Choose a Location 11

Installing the Projector 15

Connecting the Cables 17

Connecting Video and Computer Equipment 17

Making Other Connections 19

Installing Batteries in the Remote Control 20

Charging the 3D Glasses 20

Turning the Projector On and Off 21

Turning On the Projector 21

Turning Off the Projector 22

Selecting the Image Source 22

Positioning the Image 23

Making Basic Adjustments 26

Focusing and Zooming 26

Choosing the Aspect Ratio 27

Viewing 3D images 28

Projecting in Split Screen mode 30

Choosing the Color Mode 31

Advanced Color Adjustments 32
Adjusting the Gamma Setting 33
Adjusting RGBCMY 34
Locking the Projector 34

Making Detailed Adjustments 36
Using the Menu System 36
Changing How the Menus Display 37
Adjusting the Picture Quality 38
Input Brightness Settings 38
Sharpness and Picture Quality Settings 40
Color Settings 41
3D Setup 43
Adjustments for Computer Images 45
Split Screen Setup 45
Selecting Memory Settings and Resetting the Projector 47
Creating Memory Settings 47
Selecting Memory Settings 47
Renaming Memory Settings 48
Deleting Saved Memory Settings 48
Resetting the Projector 49
Customizing Projector Features 50
Image Sizing 50
Screen Options 51
Other Setup Options 51
Adjusting the LCD Alignment 53

Using HDMI Link 56
Setting Up HDMI Link 56
Changing HDMI Link Settings 57

Maintenance 58
Cleaning the Lens 58
Cleaning the 3D Glasses 59
Cleaning the Projector Case 60
Cleaning and Replacing the Air Filter 60
Replacing the Lamp 62
Resetting the Lamp Usage Timer 65
Checking the Projector Status 66
Storing the Projector 66
Transporting the Projector 67

Problem Solving 68
What To Do When the Lights Come On or Flash 68
Solving Picture Problems 70
Solving Remote Control Problems 74
Where to Get Help 75

Specifications 76

Notices 81
Important Safety Information 81
FCC Compliance Statement 83
Copyright Notice 84
A Note Concerning Responsible Use of Copyrighted Materials 84
Trademarks 85

Introduction

The PowerLite® Pro Cinema 6020UB projector lets you enjoy theater-quality 2D and 3D images in the relaxing environment of your own home. Designed especially for home cinema use, it offers these outstanding features:

- Native 1080p (1920 × 1080) resolution, dynamic contrast ratio up to 320,000:1 and up to 2400 lumens of color brightness and 2400 lumens of white brightness (light output) for incredibly rich, sharp images in almost any setting
- Auto Iris system that constantly controls the light output based on the gamma and black/white levels of your projected content, for perfectly adjusted images and deepest blacks now in both 2D and 3D
- Epson C^2Fine® 3LCD technology for reliable picture quality, increased contrast ratio and uniform colors
- 10-bit color quality for unmatched color accuracy, with over a billion colors available
- HDMI® (High-Definition Multimedia Interface®) ports for superior, uncompressed digital video
- THX® 3D certified to deliver exquisite, natural textures and film-like movie experiences
- Built-in cinema filter and Fujinon® lens for exceptional picture quality
- True 16:9 wide-format projection
- Flexible setup configurations, including front projection and ceiling mounted, with vertical and horizontal lens shift dials for offset placement

Projector Parts

Front

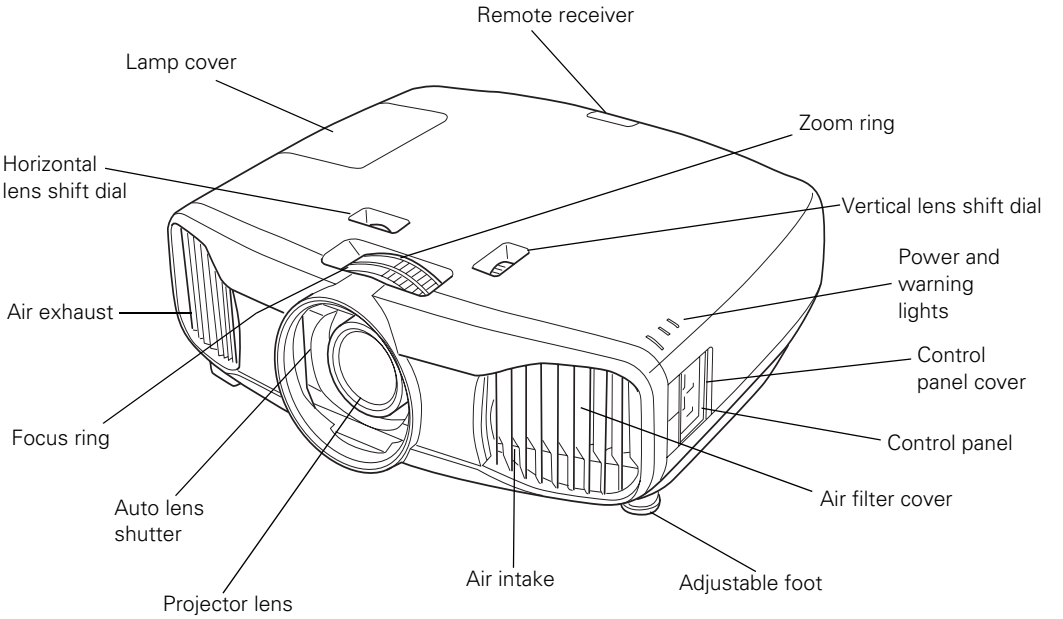

Back

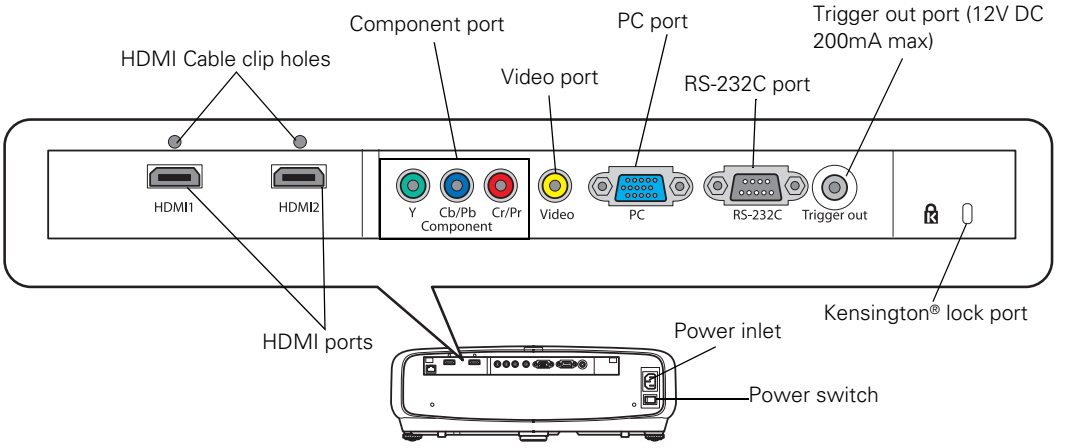

Bottom

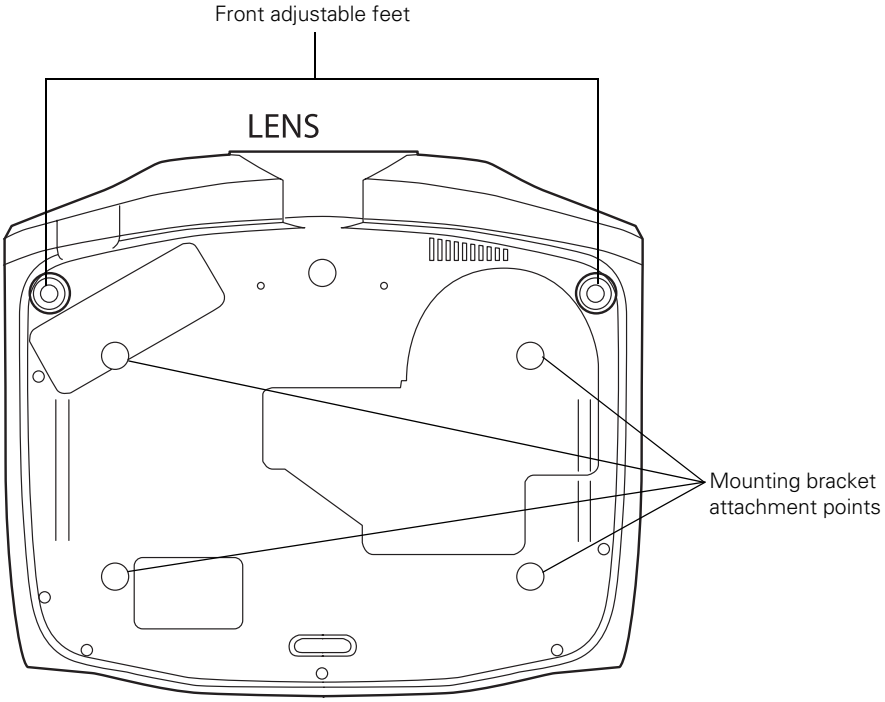

Projector Control Panel

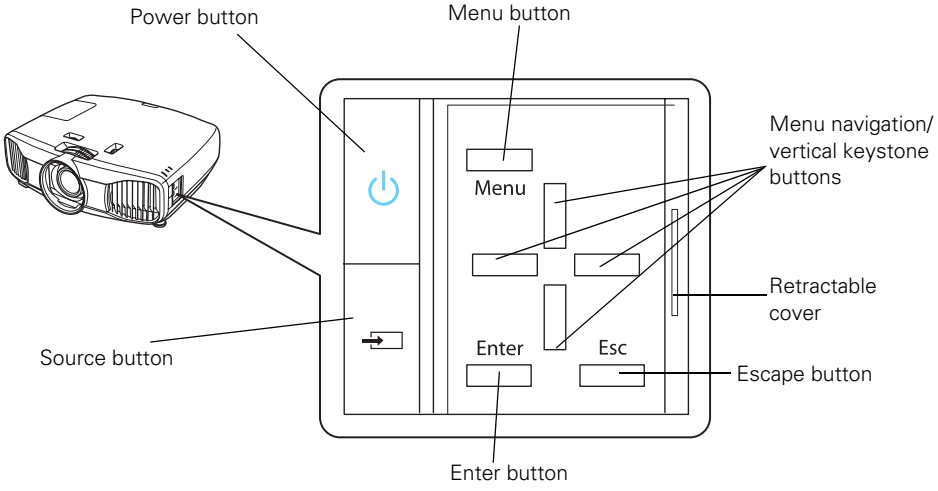

Remote Control

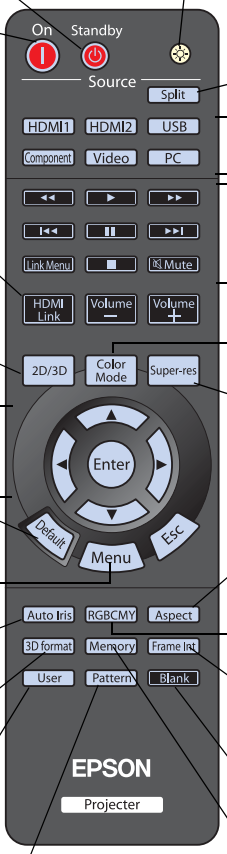

On button
Turns projector on

Standby button
Turns projector off

Illumination button
Lights the remote control buttons for easy viewing

Split button
Toggles the Split Screen function on or off

HDMI Link button
Enables and disables the HDMI link function

Source buttons
Switch between equipment connected to the projector

2D/3D button
Toggles between 2D and 3D projection

HDMI Link control buttons
Control playback of a linked video device

Menu navigation buttons

Color Mode button
Quickly change color settings to match room lighting

Default button
Resets menu selection to default values

Super-res button
Adjusts the Super-res setting on or off

Aspect button
Changes the picture's aspect ratio

Menu button
Displays the projector's menus

RGBCMY button
Displays the color adjustment menu

Auto Iris button
Toggles the Auto Iris function on or off

Frame Int setting
Adjusts the Frame Interpolation setting

3D format button
Adjusts the 3D Format setting

Blank button
Temporarily stops projection or hides the menu screen

Pattern button
Toggles the test pattern on or off

User button
Programmable button performs various functions

Memory button
Accesses the memory menu

Optional Accessories

Epson provides the following optional accessories for the projector:

Product	Part number
Replacement lamp	V13H010L69
Air filter replacement	V13H134A39
Replacement remote control	1581984
Kensington security lock (theft-deterrent device)	ELPSL01
Projector mount	CHF2500
RF 3D active shutter glasses	V12H548006
PixiePlus control system for Epson projectors	ELPSP10
Belkin Pro Series VGA / SVGA cable – 6 ft	F3H982-06
Belkin PureAV HDMI audio video cable – 3 ft	AV22300-03
Fixed Anamorphic Lens Kit	ELPFALKED
Motorized Anamorphic Lens Kit	ELPALK3

In addition to the accessories listed above, 1-year and 2-year extended service plans are available. You can purchase these plans and other accessories from an authorized Epson reseller. To find the nearest reseller, please call 800-GO-EPSON (800-463-7766). To purchase online, visit **www.epsonstore.com** (U.S. sales) or **www.epson.ca** (Canadian sales).

Registration and Warranty

Your projector comes with a basic three-year carry-in warranty for the projector, one-year 3D glasses warranty, and a 90 day limited warranty for the lamp. For details, see the *Quick Setup* sheet.

In addition, Epson offers free Extra Care[SM] Home Service. In the unlikely event of an equipment failure, you won't have to wait for your unit to be repaired. Instead, Epson will ship you a replacement unit anywhere in the United States, Canada, or Puerto Rico. See your *Extra Care Home Service* brochure for details.

To register, simply follow the registration instructions on the CD, or register online at **epson.com/webreg**. Registering also lets you receive special updates on new accessories, products, and service.

Using This Manual

This book contains all the information you need to use the projector, in addition to basic setup and maintenance instructions, troubleshooting tips, important safety instructions, specifications, and warranty information.

Please follow these guidelines as you read through the manual:

Warning: Must be followed carefully to avoid bodily injury.

Caution: Must be observed to avoid damage to your equipment.

Note: Contains important information about your projector.

Tip: Contains helpful projection tips.

Need additional help? Take advantage of Epson's automated support services 24 hours a day at **epson.com/support** (U.S.) or **epson.ca/support** (Canada). Use this site to view FAQs or product information and e-mail Epson.

If you need more help, you can use the Epson® PrivateLine® Support service by calling (800) 637-7661.

Setting Up the Projector

Follow the instructions in this section to choose a location for the projector, connect the cables, and display an image.

Choose a Location

You can install the projector for the viewing setups shown below, as well as rear projection.

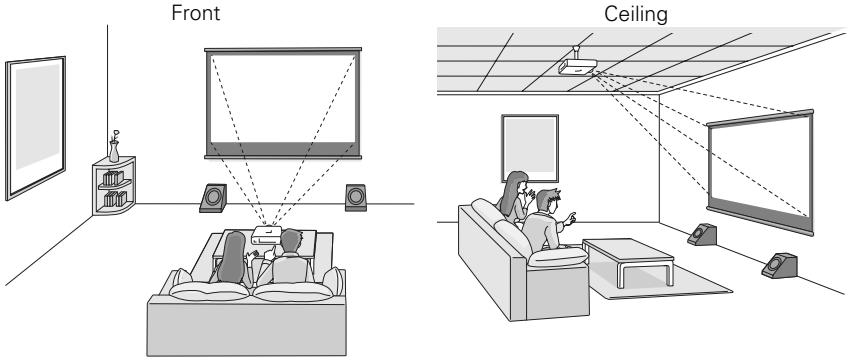

Keep the projector level and place it at a height so its lens is even with the top or the bottom of the screen and is centered horizontally. If this is not possible, use the lens shift dials to reposition the image. You can use lens shift to move the image up or down by nearly its full height, and left or right by about one-half its width (for details, see page 23).

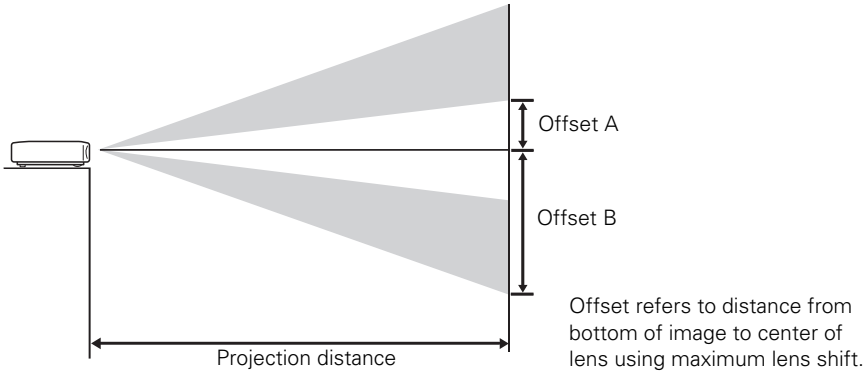
Offset A
Offset B
Offset refers to distance from bottom of image to center of lens using maximum lens shift.
Projection distance

If you place the projector off to the side, aim it straight ahead (rather than at the center of the screen), then use the horizontal lens shift dial to center the image on the screen.

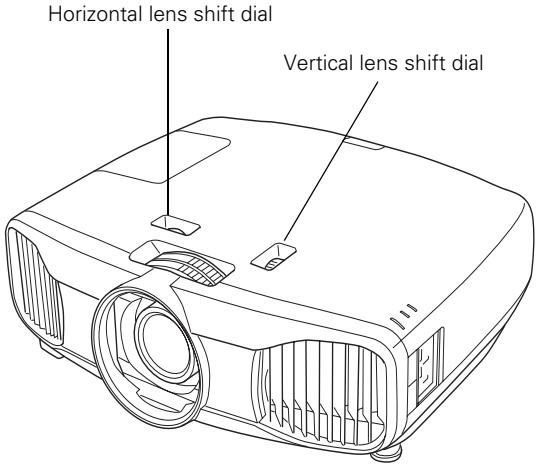

Caution: Do not try to move the lens by hand, or you may damage the projector. Always use the lens shift dials to change the lens position.

The size of the image is determined by the distance from the projector's lens to the screen. Depending on your display settings and how you use the Zoom ring, the actual size may differ. Use these tables as a guide for projector placement:

16:9 aspect ratio

Projection distance	Diagonal image size (width × height)	Offset A	Offset B	Horizontal Offset
3.8 to 8.3 feet 1.17 to 2.52 m	40 in. (35 × 20 in.) 101.6 cm (89 × 50 cm)	9 in. 23 cm	28.6 in. 73 cm	–16.4 to 16.4 in. –42 to 42 cm
5.8 to 12.5 feet 1.77 to 3.80 m	60 in. (51 × 28 in.) 152.4 cm (130 × 75 cm)	13.5 in. 34 cm	42.9 in. 109 cm	–24.6 to 24.6 in. –63 to 63 cm
7.8 to 16.7 feet 2.38 to 5.08 m	80 in. (71 × 39 in.) 203.2 cm (180 × 100 cm)	17.9 in. 46 cm	57.2 in. 145 cm	–32.8 to 32.8 in. –83 to 83 cm
9.8 to 20.9 feet 2.98 to 6.36 m	100 in. (87 × 47 in.) 254 cm (220 × 120 cm)	22.4 in. 57 cm	71.5 in. 181 cm	–41 to 41 in. –104 to 104 cm
11.8 to 25.1 feet 3.59 to 7.64 m	120 in. (106 × 59 in.) 305 cm (270 × 150 cm)	26.9 in. 68 cm	85.7 in. 218 cm	–49.2 to 49.2 in. –125 to 125 cm
14.7 to 31.4 feet 4.50 to 9.56 m	150 in. (130 × 75 in.) 381 cm (330 × 190 cm)	33.6 in. 85 cm	107.2 in. 272 cm	–61.5 to 61.5 in. –156 to 156 cm
17.7 to 37.7 feet 5.39 to 11.49 m	180 in. (173 × 98 in.) 457 cm (440 × 250 cm)	40 in. 103 cm	129 in. 327 cm	–74 to 74 in. –188 to 188 cm

4:3 aspect ratio

Projection distance	Diagonal image size (width × height)	Offset A	Offset B	Horizontal Offset
4.7 to 10.1 feet 1.44 to 3.09 m	40 in. (32 × 24 in.) 101.6 cm (81 × 61 cm)	11.0 in. 28 cm	35.0 in. 89 cm	–20.1 to 20.1 in. –51 to 51 cm
7.1 to 15.3 feet 2.18 to 4.66 m	60 in. (47 × 35 in.) 152.4 cm (120 × 90 cm)	16.5 in. 42 cm	52.5 in. 133 cm	–30.1 to 30.1 in. –76 to 76 cm
9.6 to 20.4 feet 2.92 to 6.23 m	80 in. (63 × 47 in.) 203.2 cm (160 × 120 cm)	22.0 in. 56 cm	70 in. 178 cm	–40.2 to 40.2 in. –102 to 102 cm
12 to 25.5 feet 3.66 to 7.79 m	100 in. (79 × 59 in.) 254 cm (200 × 150 cm)	27.5 in. 70 cm	87.5 in. 222 cm	–50.2 to 50.2 in. –127 to 127 cm
14.4 to 30.7 feet 4.40 to 9.36 m	120 in. (94 × 71 in.) 305 cm (240 × 180 cm)	32.9 in. 84 cm	104.9 in. 267 cm	–60.2 to 60.2 in. –153 to 153 cm
18 to 38.4 feet 5.51 to 11.71 m	150 in. (118 × 91 in.) 381 cm (300 × 230 cm)	41.2 in. 105 cm	131.2 in. 333 cm	–75.3 to 75.3 in. –191 to 191 cm

4:3 aspect ratio (continued)

Projection distance	Diagonal image size (width × height)	Offset A	Offset B	Horizontal Offset
24.2 to 51.3 feet 7.36 to 15.62 m	200 in. (161 × 118 in.) 508 cm (410 × 300 cm)	55 in. 139 cm	175 in. 444 cm	–100.4 to 100.4 in. –255 to 255 cm

To determine the exact image size when you know the projection distance (or the exact projection distance when you know the desired image size), you can use the Image Size Calculator. This program is available on the Epson website at **epson.com/support** (U.S.) or **epson.ca/support** (Canada).

Also keep these considerations in mind:

- Make sure there is plenty of space for ventilation around and under the projector. Do not set the projector on top of loose materials that could block the vents underneath.
- Make sure the projector is within 9.8 feet (3 m) of a grounded electrical outlet or extension cord.

In order to view 3D images correctly, 3D glasses must be worn within proper range of the projector. Use the image below to determine the ideal distance for 3D projection (the shading represents the 3D viewing area):

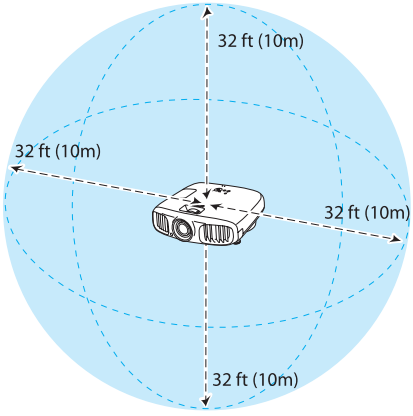

Installing the Projector

To install the projector, you first need to determine the location, based on the size of your screen (maximum diagonal image size). Use the tables on page 13 as a guide to positioning the projector.

To suspend the projector from a ceiling, you will need the included projector mount designed for the projector. Follow the instructions included with the mount to install the projector.

Warning: When installing or adjusting the ceiling mount, do not use adhesives to prevent the screws from loosening and do not use any type of oil or lubricant. These may cause the projector casing to crack and the projector may fall, causing serious injury and serious damage to the projector.

If you install the projector on the ceiling, you will need to invert the picture so that it appears right side up. Follow these steps:

1. Press the Menu button on the remote control.
2. Open the Settings menu, then select Projection.
3. Select Front/Ceiling.
4. Press the Menu button to exit the menu system.

The following illustrations show the dimensions of the projector:

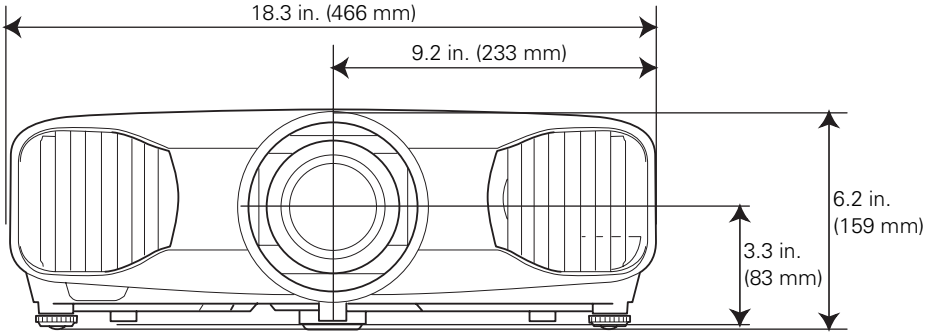

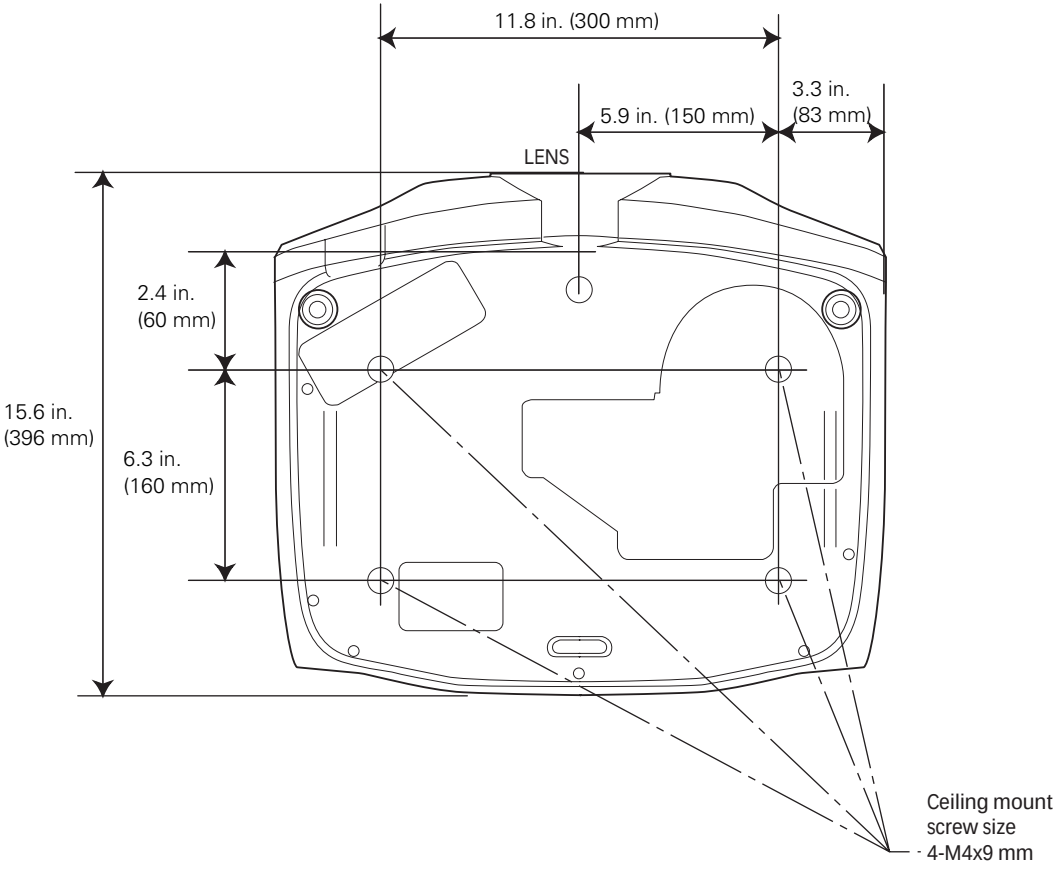

Connecting the Cables

Connecting Video and Computer Equipment

You can connect the projector to many types of video equipment, such as a Blu-ray Disc™/DVD player, digital tuner, cable or satellite box, video game console, camcorder, or digital camera. You can also connect it to a desktop or laptop PC or Apple Mac system. For details on compatible video formats, see page 78.

You can connect up to five pieces of equipment at the same time, using any of the commercially available cables shown below:

Port name	Video equipment connection	Computer connection
HDMI1/ HDMI2 	Use an HDMI cable (High Speed required for 3D): 	
Component 	Use a component video cable (with RCA-style connectors):  Connect the cable to the three component video ports. Match corresponding colors between the cable and the ports.	—
PC 	—	Use a Mini D-sub, 15-pin monitor cable to connect to a computer RGB (monitor) port: 
Video 	Use an RCA video cable: 	—

For best results, connect your video equipment to the HDMI port, if possible. If your equipment doesn't support HDMI, connect it to either the Component (for high quality, component video) or Video (for composite video) port.

Note: You need to use a High Speed HDMI cable to use the projector's 3D features. If you aren't sure if your HDMI cable is High Speed, contact your cable manufacturer.

When you connect an HDMI cable to the projector, it is recommended that you fasten it with the included cable clip. Follow the steps below to install the cable clip.

Note: The cable clip will fit most standard, round HDMI cables. The clip may not fit non-round or thick HDMI cables.

1. Connect the HDMI cable to one of the HDMI ports on the projector.
2. Insert the end of the cable clip anchor into the cable clip hole above the HDMI port, as shown below.

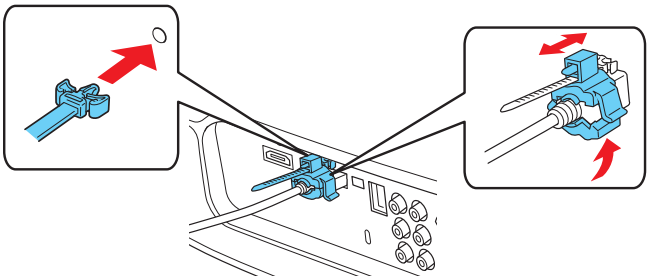

3. Place the open cable clip around the HDMI cable, but don't lock it into place.
4. Slide the cable clip towards the projector and lock the clip onto the HDMI connector.

To remove the cable clip, unlock the clip and disconnect the HDMI cable. Then pinch the sides of the cable clip anchor and carefully pull it out of the cable clip hole.

Making Other Connections

Connect the power cable and other cables described below, depending on how you plan to use the projector.

- Plug the power cable into the projector and a grounded electrical outlet.

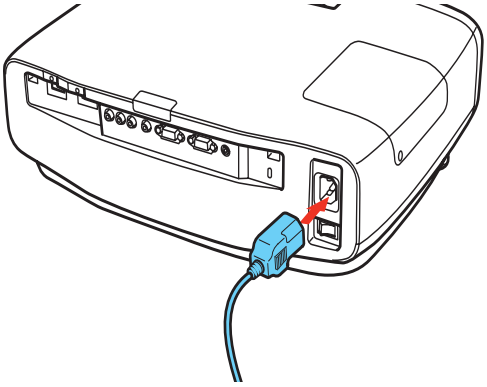

- To use an AV controller with the projector, connect a 9-pin null modem serial cable to the RS-232C port.
- To connect external devices such as motorized screens, connect a mini-jack stereo (3.5 mm) cable to the Trigger Out port and set the Trigger Out menu option to On. See page 53 for more information. The Trigger Out port uses a 12V DC (200 mA max) signal.

Installing Batteries in the Remote Control

The remote control uses two AA batteries.

Warning: Keep batteries away from children. If a battery is swallowed, contact your doctor immediately.

1. Release the tab and lift open the cover.
2. Insert two new AA batteries as shown.
3. Reinsert the cover and press it down until it clicks into place.

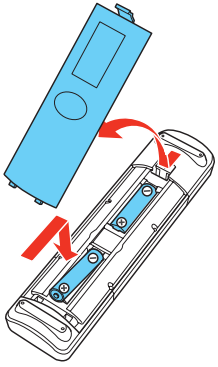

Aim the remote control at the screen, or at the front or back of the projector. Make sure you are within 32 feet (10 meters) of the projector.

If you suspect the batteries are weak, press the illumination button. If the buttons do not glow, replace the batteries.

Charging the 3D Glasses

If you are using Epson RF 3D Active Shutter Glasses, follow these steps to charge the glasses:

1. Plug a Micro-USB cable into the port on the bridge of the glasses.

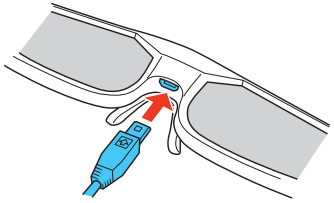

Note: Make sure to plug in the connector in the correct orientation so that you don't damage the cable or the glasses.

2. Do one of the following:

   - Plug the other end of the USB cable into the USB-to-AC adapter, then connect the adapter to a wall outlet.

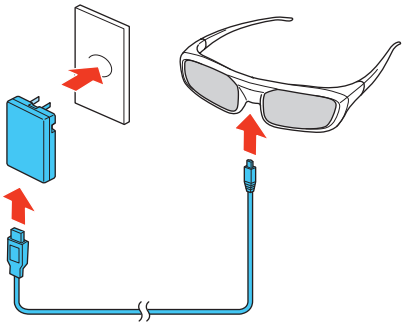

   - Plug the other end of the USB cable into a computer or other device with an available USB port.

Note: Epson does not guarantee the compatibility of the Epson RF 3D active shutter glasses with computers or other devices.

Turning the Projector On and Off

Turning On the Projector

1. Turn on the power switch on the back of the projector.
2. Turn on any connected equipment you plan to use.
3. Press the On button on the remote control or the ⏻ power button on the projector.

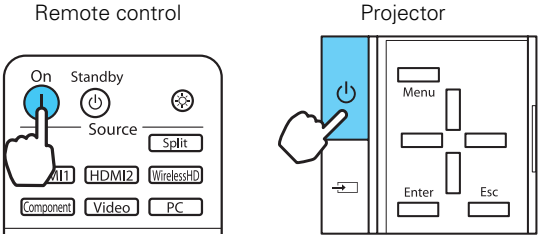

Note: To prevent children from turning on the projector, you can use the Child Lock feature. See page 34 for details.

If you'll be using the projector at an altitude above 4921 feet (1500 meters), turn on High Altitude Mode so the fan can properly cool the projector at the high altitude air pressure. See page 53 for details.

The power light flashes while the projector warms up. If you don't see a picture, you may need to change the image source as described on page 22.

Turning Off the Projector

1. Turn off any equipment connected to the projector.
2. Press the ⏻ power button on the projector twice or press the Standby button on the remote control and wait for the power light to stop flashing.
3. Turn off the power switch on the back of the projector.

   Caution: Turn off this product when not in use to prolong the life of the projector.

Selecting the Image Source

The source buttons on the projector and remote control let you switch between images from different pieces of equipment connected to the projector (such as a Blu-ray Disc/DVD player, cable or satellite box, or video game console).

Press the Source button on the remote control that corresponds to the port to which your video source is connected.

Note: There may be a brief delay when switching between sources.

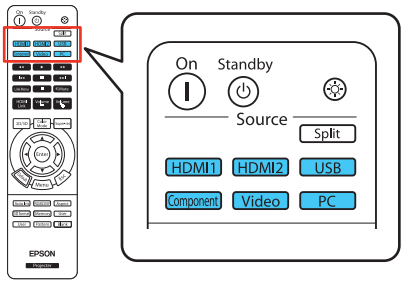

If you press the source button on the projector, you see a list of available sources. Press the source button to move through the list and select the desired source.

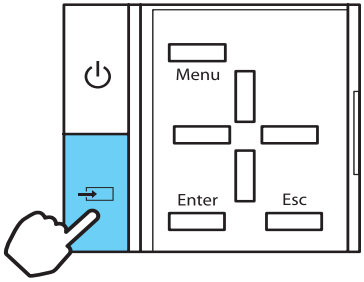

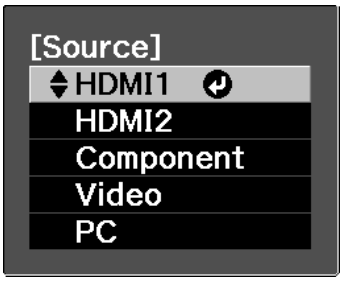

Note: If an image does not appear, see "Problem Solving" on page 68.

To temporarily turn off the image and darken the screen, press the **Blank** button on the remote control. Press the **Blank** button again to return to normal viewing.

Positioning the Image

If the projector is not centered in front of the screen, use the lens shift dials and, if needed, vertical keystone buttons to correct the position and shape of the image.

Note: For the best image quality, try to position the projector so that you do not need to use keystone correction.

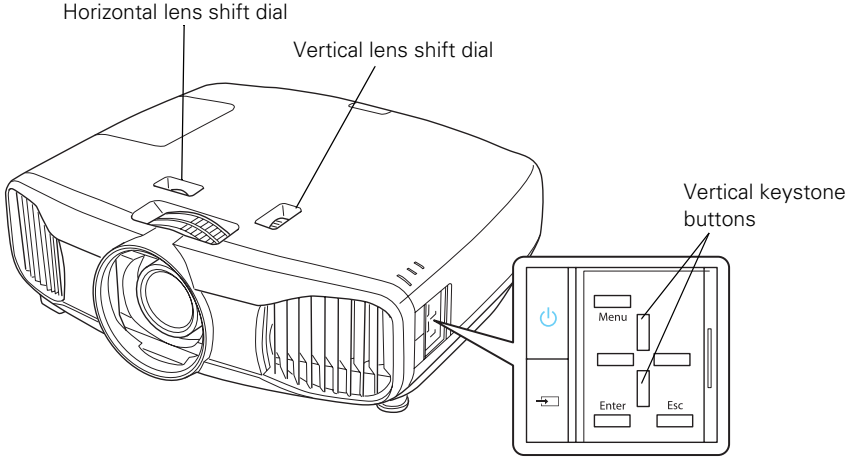

Note: You can display a test pattern to help adjust the image position by pressing the **Pattern** button on the remote control. Press the **Esc** button to turn off the test pattern.

The vertical position (V) can be adjusted by up to 96% of the height of the screen, while the horizontal position (H) can be adjusted by up to 47% of the width of the screen.

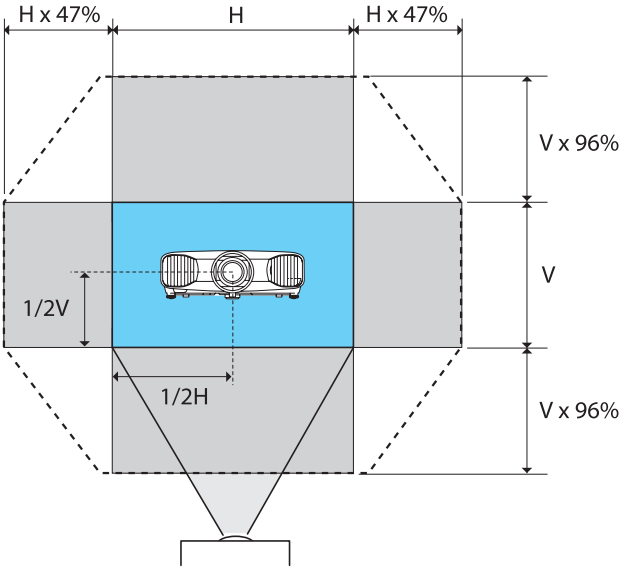

If one side of the image is taller than the other, make sure the projector is parallel to the screen. If necessary, adjust the front feet so that the projector is horizontal.

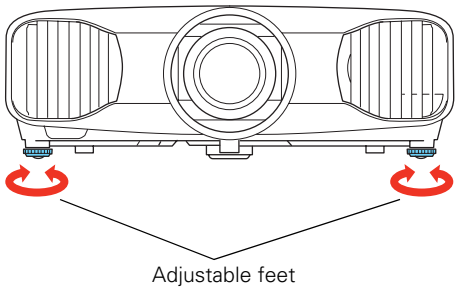

Note: If the projected image shape is not rectangular, the projector is not level with the screen or aimed directly at the screen. It's best to adjust the physical position of the projector to correct this. If you still can't correct the image shape by adjusting the position of the projector, use the vertical keystone buttons to fix the image shape.

When setting up the projector, make sure that it is placed level to the screen in order to provide the best possible image quality. If you must set up the projector at an angle, use the vertical keystone buttons to correct the image shape.

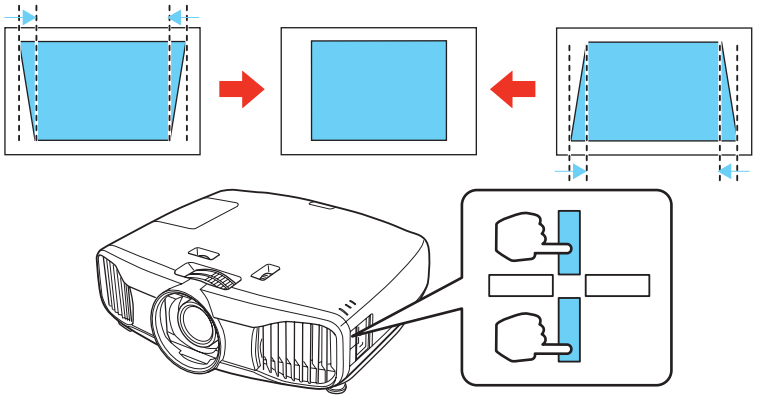

Making Basic Adjustments

Follow the instructions in this chapter to make basic adjustments to the image shape, size, color, and quality. For further refinements, see “Making Detailed Adjustments” on page 36.

Focusing and Zooming

Use the focus ring to sharpen the image.

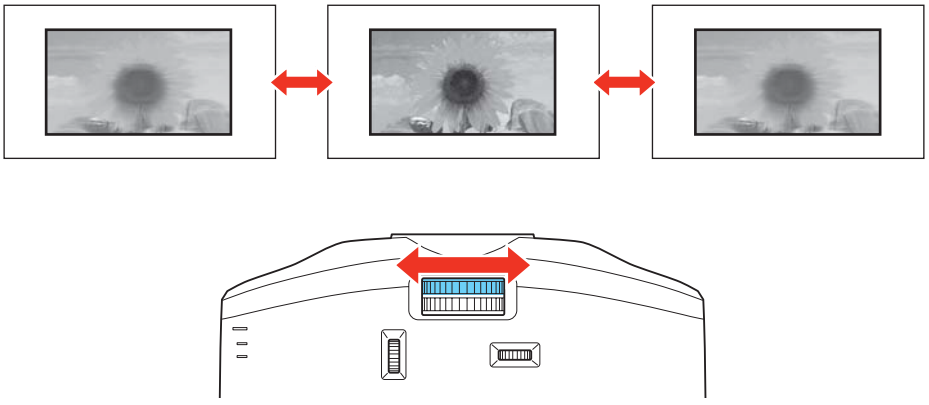

Use the zoom ring to reduce or enlarge the image.

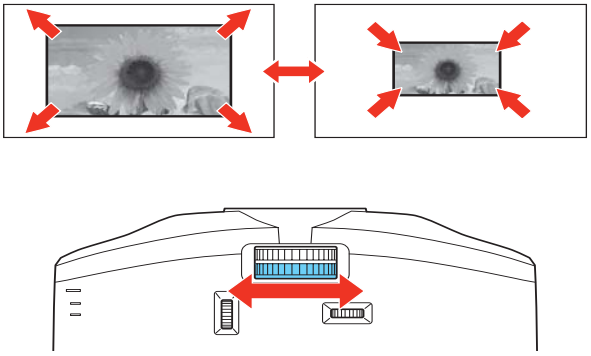

Choosing the Aspect Ratio

In many cases, video signals are automatically resized to fit on your screen when Auto is selected as the Aspect setting. You may need to change the size of the image (or aspect ratio) for certain image types by pressing the Aspect button on the remote control.

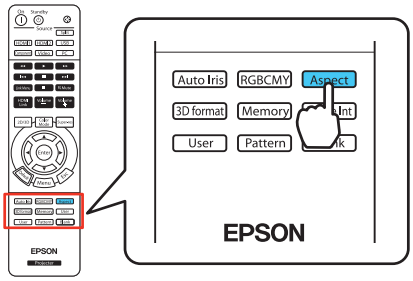

Note: When displaying 720p, 1080i, or 1080p signals through the HDMI or Component video port, the aspect ratio is automatically selected and you cannot change it.

If you display a 4:3 image using the Zoom setting, the top and bottom will be cut off. You can use the Zoom Caption Pos. option and other settings to resize and reposition the image. For details, see page 51.

For details on how the projector resizes the picture when you choose an Aspect setting, see page 78.

Select one of these settings:

- Normal for standard TV broadcasts, computer images, or images with a 4:3 aspect ratio.
- Full for images recorded in 16:9 (wide-screen) format and squeeze mode.
- Zoom for letterbox images.

4:3 image using Normal setting

16:9 image using Full setting

- Wide for expanding a 4:3 image to 16:9 so it fills the whole screen. This stretches only the right and left sides of the image; the central part is unchanged.

- Anamorphic Wide to display images that have a 2.40:1 aspect ratio (such as CinemaScope®) when using a commercially available anamorphic lens (available from Epson—see page 9).

  Note: If you use this setting without an anamorphic lens, the image fills the screen vertically but not at the correct aspect ratio. Make sure Overscan is set to Off (100%), or the image won't display correctly (see page 50). If your anamorphic lens has a motorized transport, you can operate it automatically with the Trigger out port (see page 53).

- Horiz. Squeeze to display images that have a 16:9 or 4:3 aspect ratio when you've equipped the projector with a fixed anamorphic lens.

Viewing 3D images

To view 3D content, you must first connect a 3D-compatible video device to one of the HDMI ports on your projector. You will also need a pair of Epson or Epson-compatible RF 3D active shutter glasses.

1. Turn on and begin playback on the 3D-compatible video device.
2. Press the 2D/3D button on the remote control, if necessary.
3. Slide the power switch on your 3D glasses to the On position.

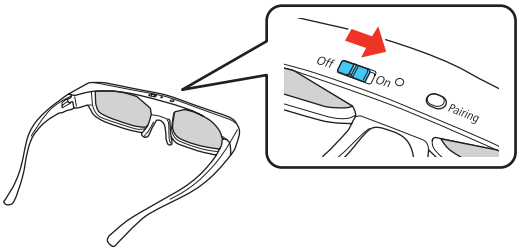

Note: If the glasses don't automatically display 3D content, you may need to pair them with the projector. Move the glasses within 10 feet (3 m) of the projector, then press and hold the Pairing button on the 3D glasses for at least 3 seconds. The status light on the glasses will alternately flash green and red, then remain green for 10 seconds, and you will see a message on the screen if pairing is successful.

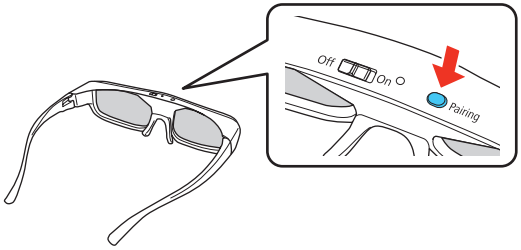

The 3D glasses turn off after 30 seconds if they aren't receiving a 3D signal. Slide the power switch to Off and then back to On to resume viewing 3D content.

The light on the 3D glasses indicates the current status of the glasses:

Light state	**Status**
Flashing red	The battery is low.
Flashing green	The glasses have entered standby mode. Turn the 3D glasses off and back on to continue viewing 3D content.
Solid red	The glasses are charging.
Solid green	The charging process is complete.
Flashing green and red	The glasses are attempting to pair with the projector.
Solid green for 10 seconds, then turns off	The glasses have successfully paired with the projector, or the glasses have been turned off.

See page 71 for more 3D troubleshooting tips.

Projecting in Split Screen mode

You can use the Split Screen feature to simultaneously project two images from different image sources next to each other. You can control the Split Screen feature using the remote control or the projector menus.

The Split Screen feature is only available with certain combinations of video sources. Use the table below to determine which video source combinations are available.

	HDMI1	HDMI2	Component	Video	PC
HDMI1	—	—	X	X	X
HDMI2	—	—	X	X	X
Component	X	X	—	X	—
Video	X	X	X	—	X
PC	X	X	—	X	—

Note: When you use the Split Screen feature, other projector features may not be available and some settings may be automatically applied to both images. Also, you can't access Split Screen mode when 3D mode is enabled.

1. Press the Split button on the remote control.

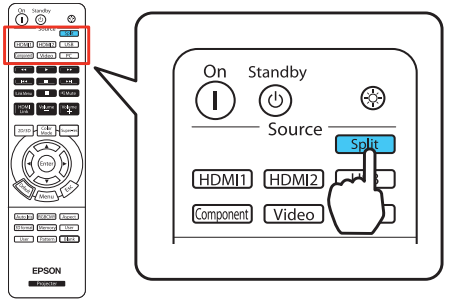

The currently selected input source moves to the left side of the screen.

2. Press the Menu button. You see this screen:

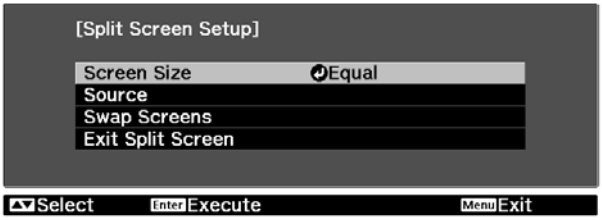

3. To select an input source for the other image, select the Source setting, press Enter, select the input source, select Execute, and press Enter. (You can also change image sources, if necessary.)
4. To switch the images, select the Swap Screens setting and press Enter.
5. To change the image sizes, select the Screen Size setting, press Enter, select a sizing option, press Enter, and press Menu to exit.

   Note: Depending on the video input signals, the images may not appear at the same size even if you choose the Equal setting.

6. To exit the Split Screen feature, press the Split or Esc button.

Choosing the Color Mode

You can change the Color Mode to automatically adjust brightness, contrast, and color, letting you quickly optimize the projected image for various lighting environments. You can also select a different color mode for each input source—which is useful if you view different types of images from different sources. (For example, you might set the HDMI 1 source to Living Room if it's usually used for watching movies in the daytime with the blinds closed, and the PC source to Dynamic for playing video games with the blinds open.)

Select the image source you want to adjust, then press the Color Mode button on the remote control. Choose from these settings:

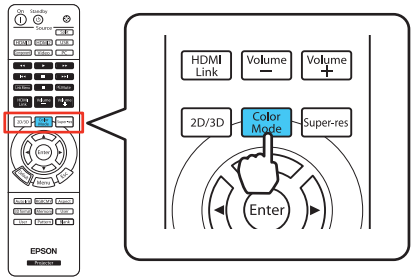

- Cinema for viewing movies in a dimly lit room.
- Dynamic for projecting the brightest picture available.
- Living Room for watching television programs during the day.
- Natural or THX for projecting natural, accurate colors in a dimly lit room.
- 3D Dynamic for projecting the brightest 3D picture available (only available when the projector is in 3D Mode).
- 3D Cinema for viewing 3D movies in a dimly lit room (only available when the projector is in 3D Mode).
- THX 3D for projecting natural, accurate colors in a dimly lit room (only available when the projector is in 3D Mode).

Advanced Color Adjustments

To further customize the color and image quality, you can adjust the gamma and individual RGBCMY color tones using the RGBCMY button on the remote control.

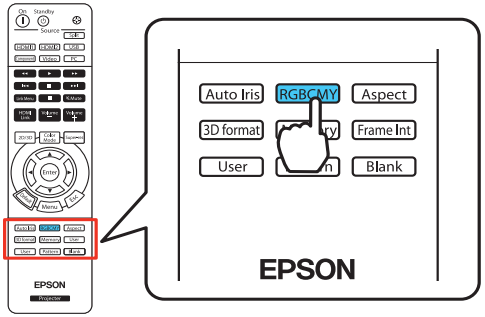

Note: You can fine-tune these and other color and image quality settings using the projector's menu system (see page 36). You can also save combinations of picture settings with the Memory feature for easy recall (see page 47). If you don't like the settings you have selected on a particular menu screen, you can press the Default button to restore the factory settings.

Adjusting the Gamma Setting

You can select from five gamma settings (2.0 to 2.4) or customize your own setting from your image or a displayed graph. Lower values will increase the contrast of dark areas, but tend to blur the bright areas. Higher values will darken the light areas. Gamma presets make minor adjustments to mid-tone values. The larger the gamma preset, the lower the midtone values. Changing these settings affects contrast which can be seen as a blur in bright areas.

1. Press the Menu button. Select Image from the main menu. Select Advanced and then Gamma. You see the following displayed on the screen:

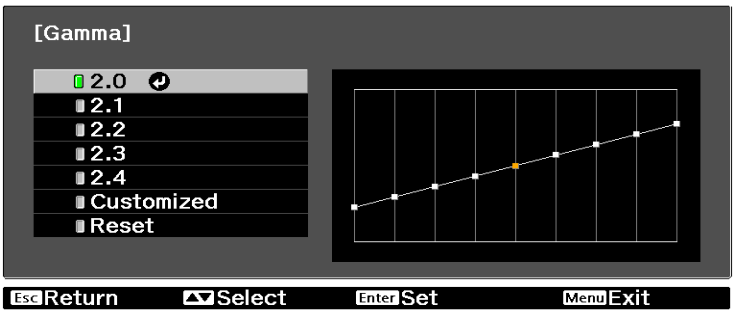

2. Do one of the following:

   - Select one of the numeric correction values using the ▲ or ▼ button on the remote control and press the Enter button. You see the setting reflected in the graph on the right. The horizontal axis represents the input signal level, and the vertical axis represents the output signal level. Press the Esc button to exit.
   - Select Customized. Then continue with the next step.

3. Do one of the following:

   - Select Adjust it from the image. You see a gamma icon on the projected image. Use the arrow buttons to move the icon to the area of brightness you want to adjust, then press Enter. The custom gamma graph appears with the channel selected for adjustment. Press the ▲ or ▼ button to adjust and then press Enter to save your setting and exit.
   - Select Adjust it from the graph. When the gamma graph appears, use the ◀ or ▶ button to select the point on the graph that you want to adjust, and then use the ▲ or ▼ button to adjust the settings. Press Enter to save your setting and exit.

4. Press the Menu button to close the menu screen when you're done.

Adjusting RGBCMY

Use this feature to adjust the hue, saturation, and brightness for each of the red (R), green (G), blue (B), cyan (C), magenta (M), and yellow (Y) color components.

1. Press the RBGCMY button. You see the following displayed on the screen:

2. Use the ▲ or ▼ button on the remote control to select the color you want to adjust, and press the Enter button.
3. Select the Hue, Saturation, or Brightness for that color, and use the ◀ or ▶ button to make the adjustment.
4. Press Esc to adjust another color, or press RGBCMY to exit.

Note: You can also adjust the offset and gain using the RGB setting in the projector's menu system (see page 42).

Locking the Projector

The projector includes two lock settings to prevent the image from being accidentally changed once it's adjusted, and to keep children from turning on the projector without adult supervision.

To access the lock settings, follow these steps:

1. Press the Menu button on the remote control.
2. Select Settings and press the OK button.
3. Select Lock Setting and press the OK button.

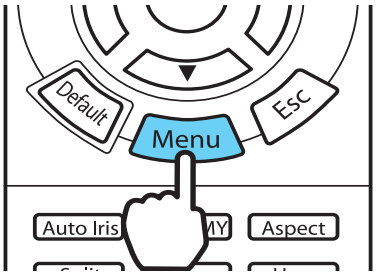

4. Choose from these options:

   - Child Lock to disable the ⏻ power button on the projector's control panel unless it is pressed for about 3 seconds. Since you can still use the remote control to turn on the projector, you may want to keep it away from children's reach.

   Note: Even if the Child Lock is on, the projector turns on and starts projecting if the rear power switch is turned on when the Direct Power On option is enabled.

   - Control Panel Lock to disable all the buttons on the projector's control panel except the ⏻ power button. A lock icon appears on the screen whenever you press a button with Control Panel Lock turned on. To operate the projector, you must use the remote control. To cancel Control Panel Lock, press and hold the Enter button on the projector's control panel for at least 7 seconds.

5. Press Menu to exit the menu system.

   If you turned on the Control Panel Lock, the projector buttons are now locked.

   If you turned on the Child Lock, turn off the projector and let it cool down. The Child Lock takes effect after the cool-down period.

Making Detailed Adjustments

You can use the projector's on-screen menus to make detailed adjustments to the image quality—such as the brightness, contrast, sharpness, and color. You can also change the menu display, sleep mode settings, and other projector features.

Using the Menu System

You can access the menu system either from the remote control or the buttons on the projector's control panel. You can access the full menu or a line menu that lets you change selected settings. You can also change the menu language and control how the menus display (see page 37).

To display the full menu, press the Menu button on the projector or remote control. You see a display like this one:

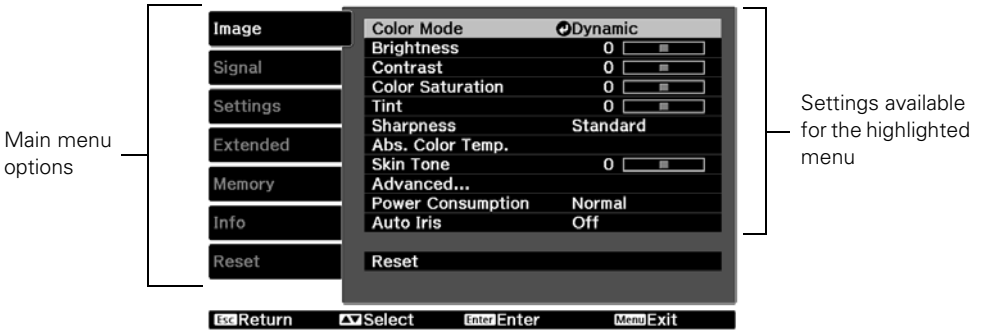

Note: You may see different options, depending on your projector model, input mode, and how your equipment is connected to it. If a menu item or setting is not available, this indicates that the setting does not apply to the current input signal or connection mode.

1. Press the ▲ or ▼ button to highlight a main menu option (Image, Signal, Settings, Extended, Memory, Info, or Reset), then press the Enter button to select it.
2. Press the ▲ or ▼ button to highlight a setting, then press the Enter button.
3. Press the ▲, ▼, ◀, or ▶ button to change settings as necessary. You may have to press the Enter button to confirm your choice.

4. When you're finished, press the Esc button to return to the previous menu or press the Menu button to exit the menu system.

To display one of the line menus, press the Enter button. You see a display like this at the bottom of the image:

- Press the ◀ or ▶ button to adjust the setting.
- Press the Menu or Esc button to close the line menu when you're done.

Note: When a line menu is displayed, you can press Default on the remote control to reset the menu to its factory setting.

Changing How the Menus Display

Use these options to control how the menus display.

- Language

  Extended > Language

  Select from 21 languages to use in the menu system.

- Menu Position

  Extended > Display > Menu Position

  Use the arrow buttons to choose a position on the screen for displaying the menu.

- Menu Color

  Extended > Display > Menu Color

  Select a color scheme for displaying the menus.

Adjusting the Picture Quality

Before fine-tuning the image using these adjustments, make sure you have already selected the best Color Mode for your picture and viewing environment, as described on page 31. Then use the settings in this section to finish adjusting the picture to your liking.

Most image quality settings are saved independently for each input signal type, input source (Video, HDMI, Component, PC), and color mode. After you finish adjusting the settings for one input source, switch to the other input sources you'll be using and make any necessary adjustments.

Input Brightness Settings

If the signal from connected equipment is weak and images appear dark, you can adjust the Brightness and Contrast settings. You can adjust brightness and contrast for each image source and color mode.

The Brightness setting controls how much light is produced by the projector, and the Contrast setting adjusts the difference between the bright and dark areas of the projected image. The other settings in this section control how the projector interprets the light and dark areas of the picture.

- Brightness

  Image > Brightness

  Adjust the brightness so it's suitable for your viewing conditions. For example, if you're projecting in a brightly lit room or onto an especially large screen, you may need to increase the brightness. Decrease the brightness for dark rooms or small screens; this also reduces power consumption and fan noise, and helps to prolong the life of the lamp.

- Contrast

  Image > Contrast

  This setting adjusts the difference between bright and dark areas.

■ Auto Iris

Image > Auto Iris

When this setting is on, the light output is automatically adjusted according to the brightness of the image. Select either Normal or High Speed to indicate how quickly you would like the projector to respond to changes in the brightness of the image. The setting is stored separately for each image source and color mode.

It is best to use High Speed for content that frequently changes from bright to dark images. Normal can be used for all other content.

■ Setup Level

Signal > Advanced > Setup Level

Note: This setting can be used only when an NTSC (480i) signal is being input through the Video port, or when a video signal is being input through the Component video ports.

This setting adjusts the threshold at which dark areas of the image are rendered black (0 IRE). For compatibility with most DVD and video equipment sold in the United States, leave this setting at 0%. Check your video equipment's specifications to be sure of the correct setting.

■ EPSON Super White

Image > Advanced > EPSON Super White

Note: This setting can be used only when the signal is input through the HDMI1 or HDMI2 ports with the Color Mode set to Natural, THX, THX 3D, Cinema, or 3D Cinema (see page 31).

If bright parts of the image are washed out or overexposed (when the input signal contains values over 100 IRE), turn this setting on to compensate.

■ HDMI Video Range

Signal > Advanced > HDMI Video Range

Note: This setting can be used only when HDMI1 or HDMI2 is selected as the image source (see page 22). This setting cannot be used when Epson Super White is set to On.

If your video equipment has an HDMI port and you've connected it to the projector using an HDMI cable, set the level of the projector to match that of the video equipment.

■ Power Consumption

Image > Power Consumption

This setting controls the light output from the projector. On Normal, the projector produces a brighter image and the lamp uses more power. To save power and extend the life of the lamp, select ECO.

Sharpness and Picture Quality Settings

If the image looks fuzzy, or if it contains noise or flickering, you can use these settings to correct it.

■ Sharpness

Image > Sharpness

Use this function to make lines and edges appear more distinct in the image. This setting is stored separately for each image source and color mode setting. You can select Standard to adjust the sharpness of the entire image, or select Advanced to access the following submenu:

Note: The Advanced setting cannot be used with a signal input through the PC port.

Choose Thin-Line Enhancement to sharpen details such as hair and clothing. Choose Thick-Line Enhancement to sharpen large contours and backgrounds. Choose Vert. Line Enhancement to increase vertical image sharpness. Choose Horiz. Line Enhancement to increase horizontal image sharpness.

■ Progressive

Signal > Progressive

Converts interlaced to progressive signals. Leave the setting on Film/Auto for viewing movies on a player that produces interlaced output. Select Video for watching videos captured with a video camera. Set to Off when viewing images with a large amount of movement.

Note: This setting can be used only when viewing a composite video signal, or 480i or 576i, or 1080i signals input through the Component, HDMI1, or HDMI2 ports (see page 78).

■ Motion Detection

Signal > Motion Detection

This setting specifies how signals are converted to progressive signals. Select a lower setting for slow-moving or still images (S) or select a higher number for video images (M).

Note: This setting can be used only when viewing a composite video signal, or 480i or 576i, or 1080i signals input through the Component, HDMI1, or HDMI2 ports (see page 78).

- Noise Reduction

  Signal > Advanced > Noise Reduction

  Note: This is not be available with a signal input through the PC port.

  This setting reduces flickering of analog images. You can select from 3 levels of noise reduction.

- Frame Interpolation

  Signal > Frame Interpolation

  This setting compares the current and previous frames, then creates a frame between them to reduce fuzziness and produce clearer moving images. You can select from 3 levels of frame interpolation. You can also access this setting by pressing the Frame Int button on the remote control.

- Super-resolution

  Signal > Super-resolution

  Note: This feature is not available when projecting in 3D.

  This setting sharpens blurred images, enhancing the apparent detail of the image. You can select from 3 levels of enhancement. Note that intentionally blurred parts of the image, such as out-of-focus backgrounds, may become sharper.

Color Settings

If the image colors don't look correct, you can adjust them using these settings. Use the first three settings described below to make the most visible changes. If you only need to make slight adjustments, you can fine-tune the picture with the remaining settings. Most color settings are stored separately for each image source and color mode.

- Color Saturation

  Image > Color Saturation

  Note: This setting cannot be used with a signal input through the PC port.

  Adjusts the color intensity of the image.

- Tint

  Image > Tint

  Note: This setting cannot be used with a signal input through the PC port.

  Shifts the color balance between magenta and green.

■ Abs. Color Temp.

Image > Abs. Color Temp.

Shifts the color balance between red and blue, making the image appear warmer or cooler.

■ Skin Tone

Image > Skin Tone

Makes fine adjustments to the tint and controls the amount of red or green in the image. Also useful for correcting black-and-white images, if they look tinted.

■ RGB

Image > Advanced > RGB

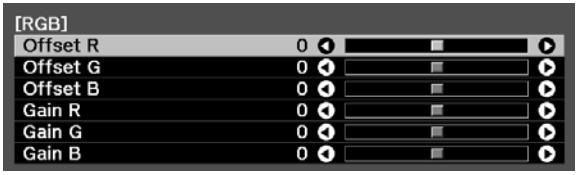

Use the RGB settings to fine-tune the color of the image. You can adjust the offset and gain for each signal color (red, green, and blue). Use Offset to adjust darker shades and Gain for the lightest shades.

■ RGBCMY

Image > Advanced > RGBCMY

Use the RGBCMY settings to adjust the hue, saturation, and brightness of the six color components (red, green, blue, cyan, magenta, yellow). After adjusting each color, press Esc to move to another menu option. You can also access this setting by pressing the RGBCMY button on the remote control. See page 34 for more information.

■ Gamma

Image > Advanced > Gamma

You can select from five gamma settings (2.0 to 2.4) or customize your own setting from your image or a displayed graph. Lower values will increase the contrast of dark areas, but tend to blur the bright areas. Higher values will darken the light areas. See page 33 for more information.

■ Color Gamut

Image > Advanced > Color Gamut

Note: The Color Gamut setting can only be used when the Color Mode is set to THX (see page 31).

You can select from three different color gamut settings according to the source material and locale. Select SMPTE-C for standard definition (USA, Canada, and other regions using NTSC), EBU (PAL) for Europe, or HDTV (all regions).

3D Setup

Use the options in the 3D Setup menu to adjust 3D brightness, the 3D display format and other 3D settings.

Note: You should only adjust the 3D Format and Inverse 3D Glasses settings if 3D images aren't displaying correctly. Changing these settings unnecessarily may cause problems with 3D projection.

■ 3D Display

Signal > 3D Setup > 3D Display

Enables or disables 3D mode. You can also change this setting by pressing the 2D/3D button on the remote control.

■ 2D-to-3D Conversion

Signal > 3D Setup > 2D-to-3D Conversion

Enable this setting to convert 2D images from an HDMI source into 3D content.

3D Format

Signal > 3D Setup > 3D Format

Use this setting to select the 3D format supported by your video device. In most cases, the projector will correctly detect the 3D format when this option is set to Auto. You should only select the 2D, Side by Side, or Top and Bottom formats when your projector doesn't properly display 3D images. See your video source documentation for information on which mode to select.

3D Depth

Signal > 3D Setup > 3D Depth

Adjust the slider to change the depth of the 3D effect.

3D Brightness

Signal > 3D Setup > 3D Brightness

Adjusts the brightness of 3D images. Select the Medium or High settings if the 3D display is too dark.

Diagonal Screen Size

Signal > 3D Setup > Diagonal Screen Size

Match this setting to the size of the projected 3D image to maximize the 3D effect and the quality of the image.

Inverse 3D Glasses

Signal > 3D Setup > Inverse 3D Glasses

Reverses the timing for the left and right shutters on the 3D active shutter glasses. Only enable this function if 3D images are not displaying correctly.

3D Viewing Notice

Signal > 3D Setup > 3D Viewing Notice

Enables or disables the viewing notice that is displayed when 3D mode is activated.

Adjustments for Computer Images

In addition to the settings described previously, you can adjust the Tracking and Sync settings for analog RGB computer images. Normally, these settings are adjusted automatically by the projector. If you notice that the image is blurry or contains dark vertical bands, you may need to adjust the settings yourself.

- Auto Setup

  Signal > Auto Setup

  Leave this setting on so that the projector automatically adjusts the tracking, sync, and position of the image.

- Tracking

  Signal > Tracking

  Adjust the tracking to eliminate vertical bands. It is easiest to adjust the tracking when the image contains a lot of fine detail (such as black text on a white background).

  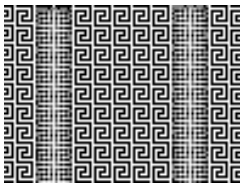

  Note: This setting is only available with a signal input through the PC port.

- Sync.

  Signal > Sync.

  Adjust the synchronization to eliminate blurriness. For best results, make sure the tracking is properly adjusted first.

  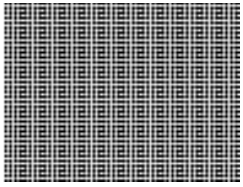

  Note: This setting is only available with a signal input through the PC port.

Split Screen Setup

Press the Menu button while in Split Screen mode to access this menu.

- Screen Size

  Split Screen Setup > Screen Size

  Adjusts the size of the two screens. Choose Larger Left to increase the size of the left screen, Larger Right to increase the size of the right screen, or Equal to split the display evenly between the two screens.

Note: Depending on the source and resolution of each input, the two screens may not appear to be of equal size when the Equal option is selected.

■ Source

Split Screen Setup > Source

Select this option to open the Source menu and select which inputs should be displayed in split screen mode.

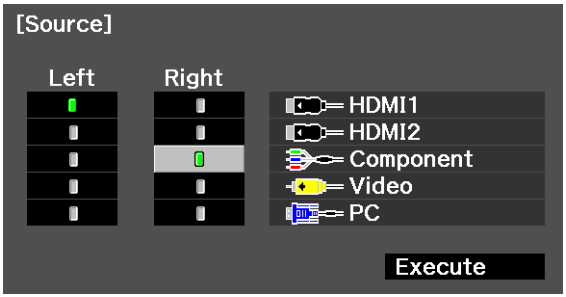

The Left and Right columns represent the left and right screens. Use the arrow buttons on the remote control to highlight Left or Right for the source you want to display. Press Enter on the remote control to select an option.

Once you have finished making your selections for both screens, select Execute to exit the Source menu and apply these settings.

Note: Certain combinations of sources can't be selected. Invalid input combinations will be grayed out. See page 30 for a complete list of available source combinations.

■ Swap Screens

Split Screen Setup > Swap Screens

Select this option to quickly switch the images on the left and right sides of the split screen display.

Selecting Memory Settings and Resetting the Projector

Your projector comes with 10 memory locations where you can save customized settings to obtain the best picture quality for each of your video inputs.

Creating Memory Settings

Memory settings can be used to store most of the picture quality settings on page 40 and color settings on page 41. Before saving them to memory, adjust the settings to the desired levels.

1. Press the Memory button on the remote control.
2. Select Save Memory.
3. Select the memory name you want to use, then press the Enter button to save your settings.

Note: Saved settings are indicated by a green highlight next to the memory name. If you select a name that is already in use, the existing settings will be erased and new ones saved in their place.

Selecting Memory Settings

You can easily recall the memory settings by using the Memory button on the remote control.

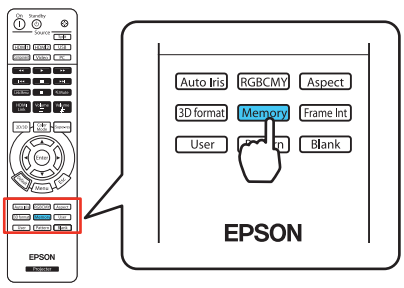

1. Press the Memory button on the remote control.
2. Select Load Memory.
3. Use the arrow buttons to select the desired setting, then press the Enter button.

   After a moment, the image appears on the screen using the retrieved settings. Certain settings may not be applied, depending on the input signal.

Renaming Memory Settings

You can rename memory settings so that they are easier for you to recognize.

1. Press the Memory button on the remote control.
2. Select Rename Memory.
3. Select the memory name you want to change, then press the Enter button. The name selection screen is displayed.
4. Do one of the following:
   - To select a name from the displayed preset names, select the desired name and press the Enter button.
   - To create your own name, select Customized and use the keyboard screen to enter the name. Use the arrow buttons to select a character, then press the Enter button. When you have selected all of the characters in your name, select Finish and press the Enter button.

Deleting Saved Memory Settings

You can clear all your memory settings at once.

1. Press the Menu button on the remote control.
2. Open the Reset menu, then select Reset Memory.
3. Select Yes, then press the Enter button to delete the memory settings.

Note: You can delete memory settings one at a time with the Erase Memory setting under the Memory menu.

Resetting the Projector

If the image quality isn't what you expect, one or more settings may be adjusted improperly. If necessary, you can restore the projector to its factory-default (original) settings.

To restore the settings in a specific menu (such as the Image or Settings menu), open that menu, select Reset, and confirm as needed. The example below shows how to reset the Image menu settings:

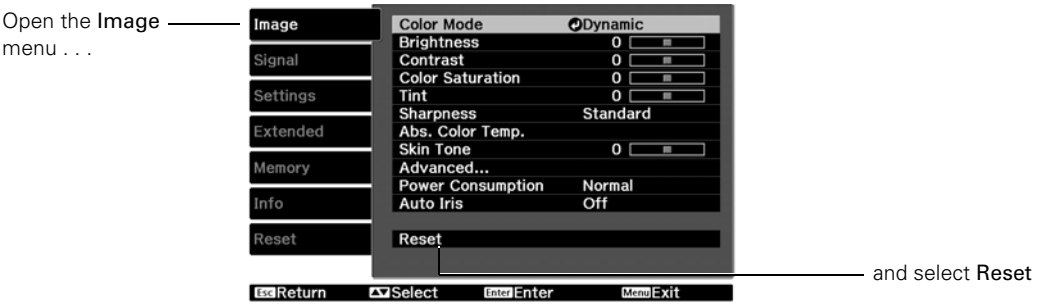

You can also reset the lamp usage timer or restore all the projector settings to their original values. Follow these steps:

1. Press the Menu button on the remote control.
2. Open the Reset menu.
3. Do one of the following:
   - Select Reset Lamp Hours to clear the lamp usage timer and reset it to zero. You should reset the lamp timer only when you install a new projector lamp. See page 65 for more information.
   - Select Reset Memory to clear all memory settings.
   - Select Reset All to return all projector settings to their original defaults (except Input Signal, User Button, Language, and Lamp Hours).

Customizing Projector Features

Use the settings in this section to adjust the image size and position, suppress on-screen text, and select basic setup options.

Image Sizing

Before adjusting any of these settings, make sure you have already selected an appropriate aspect ratio for the type of picture you're viewing (see page 27).

- Overscan

  Signal > Advanced > Overscan

  For component and HDMI video formats, this setting lets you see the edges of the image that are not normally visible in the picture (see page 78). If you see interference when you set Overscan to Off, try adjusting the Position as described below.

  Note: The Auto setting is only available when the input source is HDMI1 or HDMI2.

- Position

  Signal > Position

  Note: This setting cannot be used with a signal input through the HDMI1 or HDMI2 port.

  Use the arrow buttons to fine-tune the position of the image on the screen.

- Aspect

  Signal > Aspect

  This setting lets you change the aspect ratio of your image, and works the same as pressing the Aspect button on the remote control. See page 27 for more information.

  Note: When displaying 720p, 1080i, or 1080p signals through the HDMI or Component video port, the aspect ratio is automatically selected and you cannot change it. For information on configuring an anamorphic display, see page 28.

  If you display a 4:3 image using the Zoom setting, the top and bottom will be cut off. You can use the Zoom Caption Pos. option and other settings to resize and reposition the image.

  For details on how the projector resizes the picture when you choose an Aspect setting, see page 78.

- Zoom Caption Pos.

  Signal > Zoom Caption Pos.

  Lets you adjust the shape and position of the image so that subtitles are visible (available only if the Aspect setting has been set to Zoom). Adjust Overscan before changing the zoom position.

Screen Options

- Messages

  Extended > Display > Messages

  Turn this setting off if you want to prevent on-screen messages from appearing (such as the no-signal message, or the identifying text that appears when you switch between image sources or color modes).

- Startup Screen

  Extended > Display > Startup Screen

  Turn this setting off if you want to prevent the startup screen from appearing while the projector is warming up.

- Display Background

  Extended > Display > Display Background

  Changes the screen that's used when the projector is not receiving a signal or when you press the Blank button to temporarily stop projection.

Other Setup Options

- Projection

  Settings > Projection

  You can select different options for projecting the image: Front, Front/Ceiling, Rear, Rear/Ceiling.

- Direct Power On

  Extended > Operation > Direct Power On

  Sets projection to start without pressing the ⏻ power button on the projector or the On button on the remote control.

  Note: When Direct Power On is enabled, power surges that occur after a power outage can cause the projector to turn on.

■ Video Signal

Extended > Input Signal > Video Signal

Leave this setting on Auto so the projector can automatically interpret the format, such as NTSC or PAL (for standard TV formats).

■ Component

Extended > Input Signal > Component

Change this setting to match the type of equipment connected to the Component port. For component video, select Auto to let the projector automatically interpret the signal; or select YCbCr or YPbPr to manually select your video equipment's signal.

■ Illumination

Extended > Operation > Illumination

Turn off this setting to deactivate the lights on the projector's ⏻ power button and power light. Use this setting if you find the lights distracting in a darkened room.

■ Sleep Mode

Extended > Operation > Sleep Mode

Turn off this setting if you don't want the projector to enter sleep mode. (Sleep mode shuts the projector off automatically when there is no video signal.)

Select 5min., 10min., or 30min. as the length of time before shutoff; decreasing the time conserves power and extends the life of the lamp. 30min. is the default setting.

To turn the projector back on, press the ⏻ power button on the projector or the On button on the remote control.

■ Child Lock

Settings > Lock Setting > Child Lock

Lets you lock the ⏻ power button on the projector's control panel to make it more difficult for a child to turn on the projector. See page 34 for more information.

■ Control Panel Lock

Settings > Lock Settings > Control Panel Lock

Lets you disable all the buttons on the projector's control panel to prevent the image from being accidentally changed once it is adjusted. See page 34 for more information.

■ High Altitude Mode

Extended > Operation > High Altitude Mode

Adjusts the speed of the fan so it can properly cool the projector at higher altitudes. Turn this setting on if you are using the projector at an altitude of 4921 feet (1500 meters) or higher.

Note: The maximum operating altitude is 7500 feet (2286 meters).

■ Trigger Out

Extended > Operation > Trigger Out

Turn on this setting to have the Trigger out port output a 12-volt signal (max. 200 mA) to lower your projection screen when the projector is running. Select Power to transmit a signal when your projector is turned on, or Anamorphic Wide to engage a motorized anamorphic lens (commercially available) when that aspect ratio is selected.

Note: If you change this setting, the new setting will take effect the next time you turn the projector on.

Adjusting the LCD Alignment

You can use the LCD Alignment feature to manually adjust the color convergence of the projected image.

Note: Allow your projector to warm up for at least 10 to 15 minutes and make sure the image is in focus before you begin the LCD alignment process.

For best results, the projected image should be a minimum of 60" (152 cm) diagonally and the projection surface should not be colored or textured, otherwise the adjustment grids will be difficult to align.

Follow these steps to adjust the projector's LCD alignment:

1. Press the Menu button on the remote control. Select Extended from the main menu, and then select LCD Alignment. You see the following displayed on the screen:

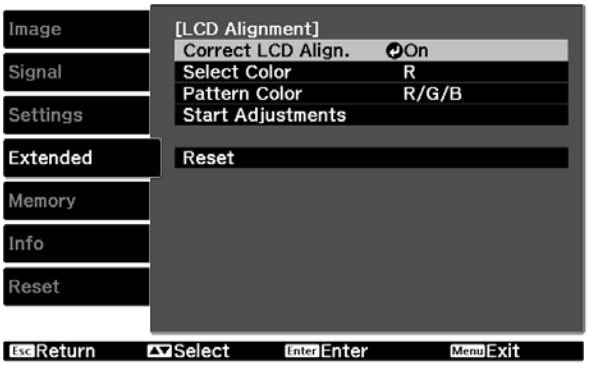

2. Set the Correct LCD Align. setting to On.
3. Set Select Color to R to adjust the red color convergence, or set it to B to adjust the blue color convergence.

   Note: You can only adjust the red or blue color convergence. Green is the standard color panel and cannot be adjusted.

4. Select a Pattern Color.
5. Select Start Adjustments, and then press the Enter button on the remote control when the confirmation screen appears. You see a grid pattern displayed on the screen:

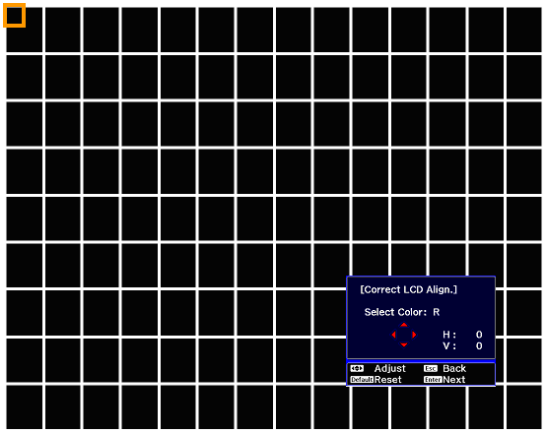

6. Use the arrow buttons on the remote control to correct any visible misalignment in the corner highlighted by the orange box.
7. When you've finished adjusting the highlighted corner, press the Enter button on the remote control to adjust the next corner. Repeat this process for each of the four corners.
8. Once you've adjusted all four corners, press the Enter button on the remote control. You see the following displayed on the screen:

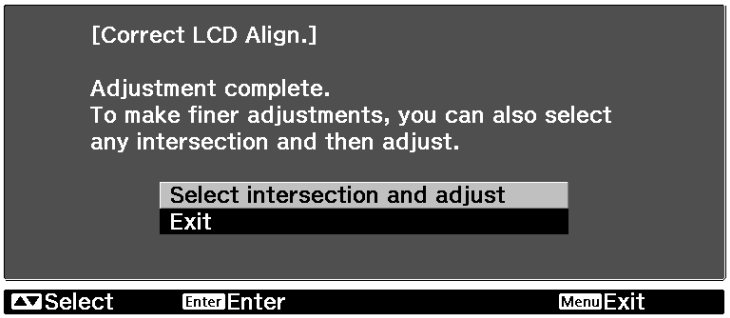

9. Do one of the following:
   - If your projector's LCD alignment is now correct, select Exit to return to the LCD Alignment menu.
   - If your projector requires additional LCD alignment, choose Select intersection and adjust to perform a detailed correction at any of the grid intersection points. Use the arrow keys on the remote control to highlight any of the intersection points and press the Enter button to select that point. You can then correct the alignment of that grid using the controls described in step 5.

Once you have finished adjusting the alignment for red or blue, you can select the other color and repeat the alignment process, if necessary.

Using HDMI Link

When you connect HDMI CEC-compatible devices to the projector with HDMI cables, you can control them using the HDMI Link control buttons on the projector's remote control. This lets you use just one remote control to operate many commonly used features on all your devices.

In a typical configuration, your DVD, Blu-Ray or other media player may be connected to the projector through an amplifier or home theater system. You can connect up to three media players that conform to the HDMI CEC standard. Even if the amplifier does not conform to the HDMI CEC standard, you can still use the projector's HDMI Link control buttons to operate the media player as long as the media player conforms to the HDMI CEC standard.

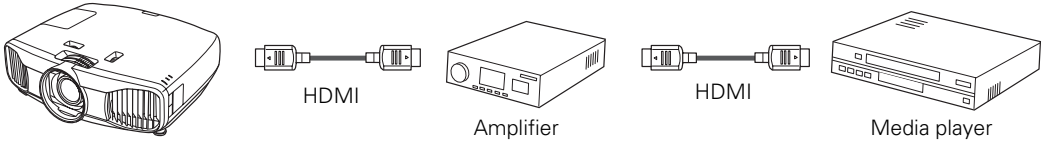

Note: Some HDMI CEC functions may not operate, depending on the connected product's design and compliance with the HDMI CEC standard.

Setting Up HDMI Link

To prepare your devices to work with the HDMI Link control buttons, follow these steps:

1. Press the HDMI Link button on the projector's remote control.
2. Select HDMI Link and set it to On.

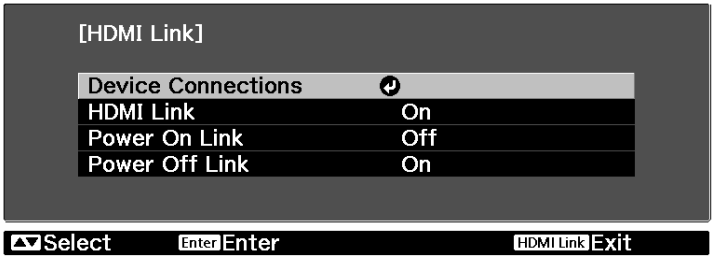

3. Press the HDMI Link button to exit the menu system.
4. Set up your connected devices so their HDMI CEC-compatible functions are enabled. For details, refer to the device manufacturer's documentation.

Changing HDMI Link Settings

1. Press the HDMI Link button on the projector's remote control.
2. Select Device Connections. You see this screen:

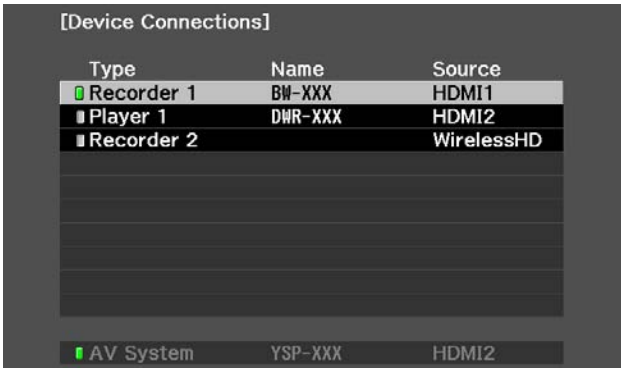

3. Use the ▲ and ▼ arrow buttons to select the device you want to operate, then press Enter. Devices are listed by type (Player, Recorder, AV System, or Tuner) and by name, if the model number is available.
4. Once the device is selected, use the HDMI Link control buttons on the remote control to operate it. You can also use the On, Standby, Enter, Esc, and arrow buttons. Commonly available functions include turning on the device when it's in standby mode, starting playback, adjusting the volume, and operating the device's link menu.

   In addition, HDMI Link allows your projector and other devices to be turned on and off together:

   - If you turn on a connected device, the projector automatically turns on and switches to the correct input source.

   Note: The power switch on the back of the projector must be turned on for this to work.

   - If you turn on the projector, connected devices such as an amplifier and Blu-Ray player are turned on. If multiple video devices are connected, the one last used is turned on. When you turn off the projector, the connected devices are turned off.

   Note: The CEC power link function of the connected devices must be enabled for this to work.

Maintenance

Your projector needs little maintenance. All you need to do on a regular basis is keep the lens clean. You also may need to clean the air filter to prevent overheating.

Warning: Before cleaning any part of the projector, turn it off and unplug the power cord. Never open any cover on the projector, except as specifically explained in this manual. Dangerous electrical voltages in the projector can injure you severely. Do not try to service this product yourself, except as specifically explained in this *User's Guide*. Do not use sprays that contain flammable gas to remove dirt and dust from the projector's lens, air filter, or case.

The only parts you should replace are the air filter and the lamp. If another part needs replacing, contact your dealer or a qualified servicer.

Cleaning the Lens

Clean the lens whenever you notice dirt or dust on the surface.

Note: Carefully open the lens shutter to clean the lens. Do not clean the lens while the projector is turned on.

- Use a blower brush that is designed for camera equipment to remove dust from the lens.
- To remove dirt or smears, use a lens cloth or tissue. If necessary, moisten the cloth with lens cleaner and gently wipe the lens surface.

Warning: Do not use a lens cleaner that contains flammable gas. The high heat generated by the projector lamp may cause a fire.

Caution: Never rub the lens with abrasive materials. Use only lens cleaning fluids that are designed for cleaning optics. Avoid touching the lens with your bare hands to prevent fingerprints on or damage to the lens surface.

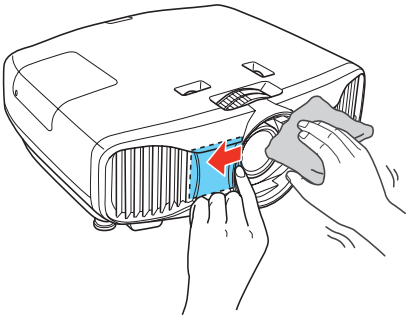

Cleaning the 3D Glasses

Use the included lint-free cloth (do not use paper towels) to gently wipe the 3D glasses whenever you notice dust, dirt, smudges, or fingerprints on the surface.

Caution: Never rub the 3D glasses with abrasive materials.

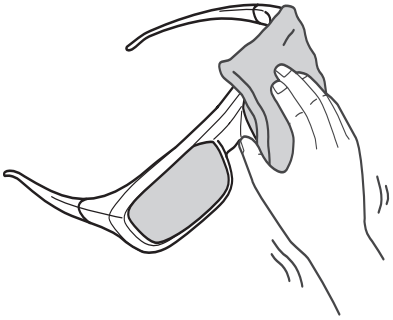

Cleaning the Projector Case

Before you clean the case, turn off the projector and unplug the power cord.

- To remove dirt or dust, wipe the case with a soft, dry, lint-free cloth.
- To remove stubborn dirt or stains, moisten a soft cloth with water and a neutral detergent. Then wipe the case and dry it with a dry cloth.

Caution: Never use wax, alcohol, benzene, thinner, or other chemical detergents. These can damage the case. Do not use canned air, or the gases may leave a residue. Never spray any liquid directly on the unit.

Cleaning and Replacing the Air Filter

Regular filter maintenance is important to maintaining your projector. Your Epson projector is designed with an easily accessible, user-replaceable filter to protect your projector and make regular maintenance simple. Filter maintenance intervals will depend on the environment.

If regular maintenance is not performed, your Epson projector will notify you when the temperature inside the projector has a reached a high level. Do not wait until this warning appears to maintain your projector filter as prolonged exposure to high temperatures may reduce the life of your projector or lamp. See page 77 for more information.

Damage due to the failure to properly maintain the projector or its filter may not be covered by the projector or lamp Limited Warranties.

Follow the steps below to maintain your projector's air filter.

1. Press the ⏻ power button on the projector twice or the Standby button on the remote control, wait for the power light to stop flashing, and turn off the power switch on the back of the projector. The projector cools down.
2. Unplug the power cord.

3. Press in on the inner edge of the air filter cover to release the latch, then pull to remove the cover.

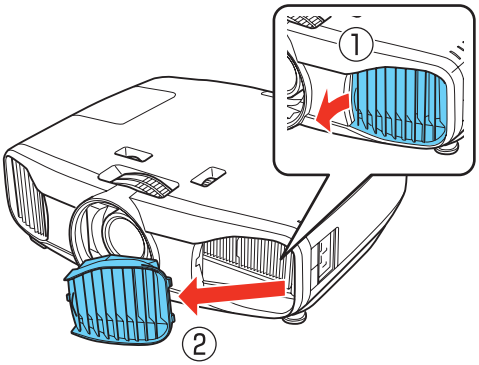

4. Remove the air filter as shown.

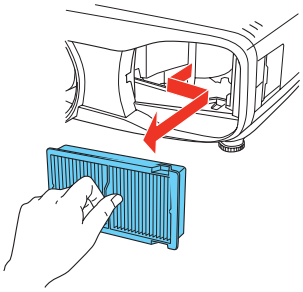

5. Gently tap both sides of the air filter against a hard surface four or five times to remove loose dust from the air filter.

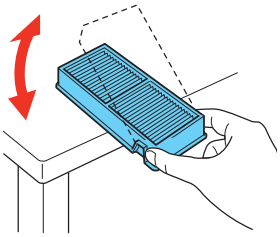

Note: Do not use excessive force when tapping the air filter, or it may crack and become unusable. Do not rinse the air filter in water, or use any detergent or solvent to clean it. Do not used canned air, or the gases may leave a residue.

6. Use a small vacuum cleaner that is designed for computers and other office equipment to remove any remaining dust from the surface of the filter. If you don't have one, gently clean the filter using a very soft brush (such as a clean artist's paintbrush).

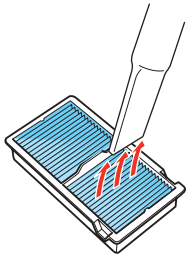

If the dirt is difficult to remove or the filter is broken, replace it. You can purchase air filter part number V13H134A39 from an authorized EPSON reseller. To find the nearest reseller, please call 800-GO-EPSON (800-463-7766). To purchase online, visit **www.epsonstore.com** (U.S. sales) or **www.epson.ca** (Canadian sales).

7. Insert the air filter as shown.

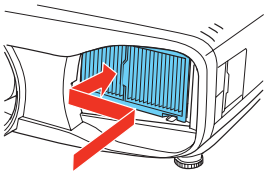

8. Insert the outer edge of the air filter cover into the notches on the projector, then press in on the inner edge of the cover to lock it into place, as shown below.

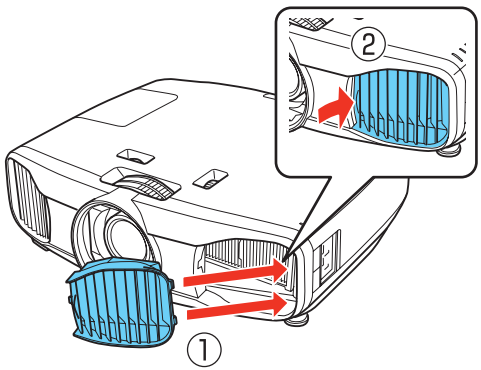

Replacing the Lamp

The projection lamp lasts for up to 4000 hours in Normal mode. You can use the Info menu to check how long it's been in use (see page 66). It's time to replace the lamp when:

- The projected image gets darker or starts to deteriorate.
- The projector's lamp light flashes orange or red at half-second intervals.
- The message Replace the lamp appears on the screen when you start projecting.

Note: Lamp life results will vary depending on mode selected, environmental conditions, and usage.

Turn off this product when not in use to prolong the life of the projector.

You can purchase lamp part number V13H010L69 from an authorized Epson reseller. To find the nearest reseller, please call 800-GO-EPSON (800-463-7766). To purchase online, visit **www.epsonstore.com** (U.S. sales) or **www.epson.ca** (Canadian sales).

Be sure to read the "Important Safety Information" on page 81 before replacing the lamp.

Warning: Let the lamp cool fully (about 1 hour) before replacing it. In the unlikely event that the lamp has broken, small glass fragments may be present and should be removed carefully to avoid injury.

Caution: Never touch the glass portion of the lamp with your bare hands; the invisible residue left by the oil on your hands may shorten the lamp life. Use a cloth or glove to handle the new lamp.

Follow these steps to replace the lamp:

1. If the projector is on, press the ⏻ power button on the projector twice or the Standby button on the remote control and wait for the power light to stop flashing.
2. Turn off the power switch on the back of the projector and unplug the power cord and any cables.
3. Wait about an hour to make sure the lamp is no longer hot.
4. Loosen the screw securing the lamp cover.

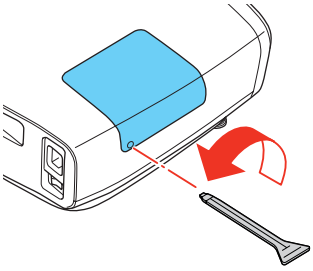

5. Remove the lamp cover as shown.

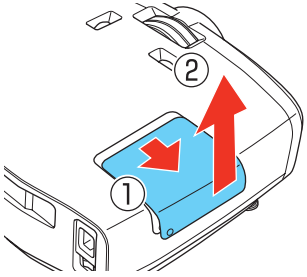

6. Loosen the screws securing the lamp (they don't come all the way out).

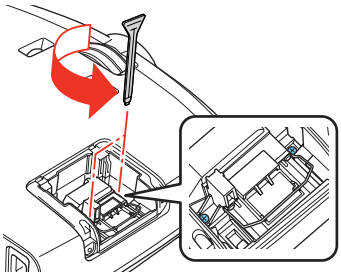

7. Lift up the lamp handle and gently pull the lamp out of the projector.

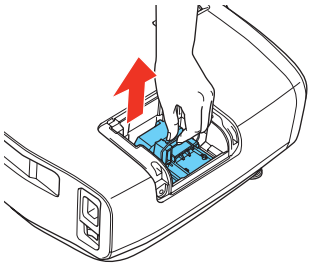

Warning: (Hg) The lamp(s) in this product contain mercury. Please consult your state and local regulations regarding disposal or recycling. Do not put in the trash.

8. Gently insert the new lamp into the projector and press the handle down. Tighten the screws.

Caution: Don't touch the glass portion of the lamp assembly. Touching the glass could result in premature lamp failure.

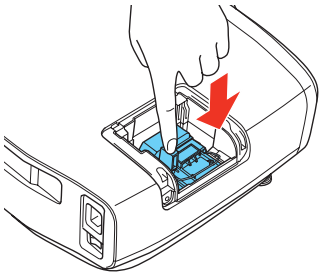

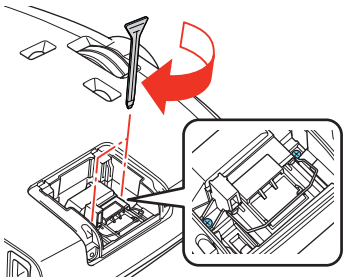

9. Replace the lamp cover. (The projector won't work if the lamp cover is open or loose.)

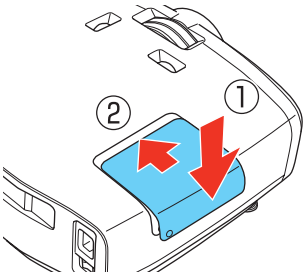

10. Tighten the lamp cover screw.

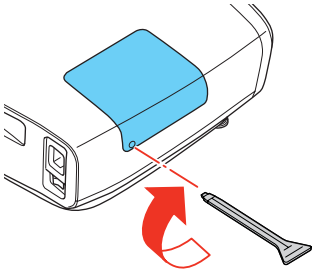

11. Reset the lamp usage timer, as described on page 65.

Resetting the Lamp Usage Timer

After replacing the lamp, plug the projector back in, turn on the power switch on the back of the projector, and press the ⏻ power button on the projector or the On button on the remote control. Then follow these steps to reset the lamp usage timer:

1. Press the Menu button on the projector or remote control.
2. Use the menu navigation buttons to open the Reset menu, then select Reset Lamp Hours.
3. When you see a confirmation prompt, highlight Yes and press the Enter button.
4. When you're finished, press the Menu button to exit.

The lamp usage timer shows 0H until you've used the lamp for at least 10 hours.

Checking the Projector Status

You can use the Info menu to view information about the current display settings and how long the projection lamp has been in use. To access the Info menu:

1. Press the Menu button on the projector or remote control.
2. Use the menu navigation buttons to open the Info menu. The following information appears:

- Lamp Hours
- Source
- Input Signal
- Resolution
- Scan Mode
- Refresh Rate
- 3D Format
- Sync Info
- Video Signal
- Deep Color (color depth)
- Status (error information)
- Serial Number

Note: The information displayed depends on the currently selected image source. The Lamp Hours shows 0H until you've used the lamp for at least 10 hours.

The resolution indicates the total number of scan lines in the source signal. The number of visible scan lines depends on the signal format standard and selected display settings (see page 78).

Storing the Projector

If you need to store the projector for an extended time, do the following:

- Make sure the temperature of the storage area is within 14 to 140 °F (–10 to 60 °C).
- Retract the adjustable front feet.
- Remove the batteries from the remote control.
- Pack the projector in its original packaging or equivalent.

Transporting the Projector

Note: Epson shall not be liable for any damages incurred during transportation.

The projector contains many glass and precision parts. When shipping the projector for repairs, use the original packaging material if possible. If you do not have the original packaging, use equivalent materials. Do not used materials that can become lodged in the projector vents. Be sure the carrier is capable of transporting fragile equipment and is aware that the projector is fragile.

Problem Solving

This section explains how to interpret the projector's status lights, solve problems with the picture and remote control, and contact technical support.

What To Do When the Lights Come On or Flash

The lights on top of the projector indicate the projector's status and let you know when a problem occurs.

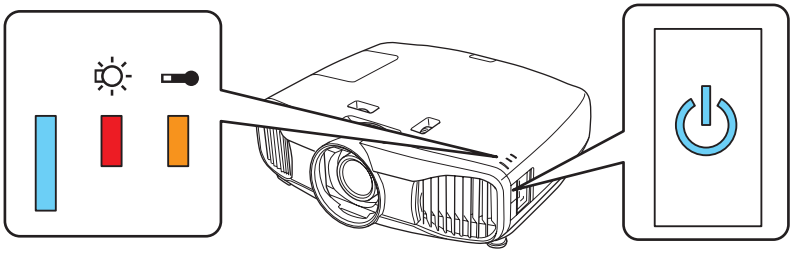

If the projector isn't working correctly, first press the ⏻ power button, let the projector cool down, and unplug the power cord. Then plug the power cord back in and turn on the projector. If this doesn't solve the problem, check the status lights on top of the projector.

Note: If the ⏻ power button and light don't come on, they may have been turned off using the **Illumination** setting (see page 52).

Lights indicating normal operation

Light state	Cause and solution
All lights are off	The projector is turned off.
Power light is off, power button is on	The projector is in standby mode. Press the ⏻ power button on the projector or the **On** button on the remote control to turn it on.

Lights indicating normal operation

Light state	Cause and solution
Power light flashes blue, power button is on	The projector is warming up. Wait for the picture to appear.
	The projector is cooling down. Wait until the power light stops flashing and remains off. Then press the ⏻ power button on the projector or the **On** button on the remote control to turn it back on.
Power light and power button are on	Projection is in progress.

Lights indicating a problem

Light state	Cause and solution
All lights are off	The projector is not receiving power. Make sure the power cord is connected securely at both ends.
 The temperature light flashes orange	High-speed cooling is in progress. If the temperature rises further, projection will stop automatically. Clean or replace the filter (see page 60). Also, make sure there is plenty of space around the projector for ventilation.
	If you are using the projector at an altitude above 4921 feet (1500 meters), turn on **High Altitude Mode** so the fan can cool the projector properly (see page 53).
 The temperature light is red	The projector is too hot, which turns off the lamp automatically. Clean or replace the filter (see page 60). Let the projector cool for five minutes, then turn it back on. Also, make sure there is plenty of space around the projector for ventilation.
	If you are using the projector at an altitude above 4921 feet (1500 meters), turn on **High Altitude Mode** so the fan can cool the projector properly (see page 53).
 The lamp light flashes orange	The lamp needs to be replaced.
 The lamp light flashes red	There is a problem with the lamp. If you just replaced the lamp, make sure the lamp and its cover are securely installed (see page 62). Turn off the projector and unplug it from the electrical outlet. Wait for the lamp to cool, then remove the lamp and check it for cracks. If the lamp isn't cracked, reinstall it, plug the projector into an outlet, and turn the power on. If this doesn't fix the problem, or if the lamp is cracked, contact Epson for assistance (see page 75).

Lights indicating a problem

Light state	Cause and solution
 The temperature light flashes red	There is a fan or sensor problem. Turn off the projector and unplug it from the electrical outlet. Then contact Epson for assistance (see page 75).
 Both warning lights are flashing red	There is an internal problem. Turn off the projector and unplug it from the electrical outlet. Then contact Epson for assistance (see page 75).

Solving Picture Problems

You cannot turn on the projector.

- Make sure the power cord is connected and the power switch on the back of the projector is turned on. Then wait a moment for the ⏻ power button to light up before pressing the ⏻ power button on the projector or the On button on the remote control.
- If you've set the Control Panel Lock, the control panel buttons are disabled; you must use the remote control to turn on the projector (see page 34).
- If you've set the Child Lock, you have to press the ⏻ power button on the projector for 3 seconds to turn on the projector, or use the remote control (see page 34).

No picture appears on the screen or you see the No Signal message displayed.

- Press one of the Source buttons on the remote control, or press the source button on the projector, to select the correct input source. Allow a few seconds for the projector to sync up after pressing the button.
- Press the Blank button on the remote control to make sure the picture hasn't been turned off temporarily.
- Check that the power light is on and not flashing, and the lens cover is open.
- The projector may be in standby (or sleep) mode. If the ⏻ power button is lit and the power light is off, press the ⏻ power button to turn the projector back on.
- Make sure your video equipment is turned on.
- Make sure your cable(s) are connected correctly (see page 17).

3D content does not display or does not display correctly.

- Press the 2D/3D button on the remote control to switch to 3D viewing mode, if necessary.
- Make sure you are within the 3D viewing range (see page 11).
- Make sure that the 3D glasses are fully charged and are paired with the projector.
- Check that your video device and media are both 3D-compatible. Refer to the documentation that came with your video device for more information.
- If you are viewing 3D content from a video device or game console, press the Menu button on the remote control, select the Signal menu, then select 3D Setup, then select 3D Format. Make sure that the Auto option is selected.
- If you are viewing a 3D television broadcast, you may have to manually select the 3D Format setting (see page 44).
- Make sure the Inverse 3D Glasses option is set to No (see page 43).
- Check that your 3D glasses have not entered standby mode. Slide the power switch on the 3D glasses into the Off position, then back to the On position.

Only part of the picture is displayed, or the picture is distorted.

- Press the Aspect button on the remote control to select a different aspect ratio (see page 27).
- If the Aspect is set to Zoom, you may need to use the Zoom Caption Pos. option to see the top or bottom section of the screen so that subtitles are visible (see page 51).
- Check the Overscan setting to make sure it's adjusted correctly (see page 50).
- Use the Position setting to reposition the image on the screen (see page 50).
- If you've connected a computer and you see only half the image, make sure the computer's Dual Display setting is turned off.
- If part of the image is cut off, reset the projector settings (see page 49).

You're using a computer and no picture appears on the screen.

If you're using a Windows® laptop:

- Press the function key that lets you display on an external monitor. It's often labeled with an icon such as 🖳/🖵, but it may also be labeled CRT/LCD. You may have to hold down the Fn key while pressing it. Check your laptop's manual or online help.

On most systems, the 🖳/🖵 key lets you toggle between the LCD screen and the projector, or display on both at the same time. Allow a few seconds for the projector to sync up after pressing it.

- If the function key doesn't let you display simultaneously on both screens, you might need to use the Display utility in the Windows Control Panel to make sure that both the LCD screen and external monitor port are enabled. From the Windows Control Panel, open the Display utility. In the Display Properties dialog box, click the Settings tab, then click Advanced. The method for adjusting the setting varies from computer to computer; you may need to click a Monitor tab, then make sure the external Monitor port is set as your primary display or enabled. See your computer manual or online help for details.

If you're using Mac OS X:

1. Open the System Preferences utility and select Displays.
2. Select the VGA Display or Color LCD option, if necessary.
3. Click the Arrange or Arrangement tab.
4. Check the Mirror Displays checkbox. (See your computer manual for details.)

The picture is upside-down or reversed.

Change the Projection setting in the Settings menu (see page 51).

The picture isn't rectangular.

- If the image looks like ⏢ or ⏢, make sure the projector is not tilted up or down, then use the vertical keystone buttons to adjust the image (see page 23).

The picture contains static or noise.

- Make sure the Input Signal is set correctly for your connected video equipment (see page 52).
- If you're viewing still images and you notice flickering or horizontal lines, turn on the Progressive setting (see page 40).
- Make sure your cables are securely connected at both ends.
- If you're using an extension cable, you may pick up interference if the cable is not adequately shielded. You may need to use a signal amplifier for longer cables.
- If you're displaying the same image on your computer and projector screen, try turning off your laptop's LCD display (see page 71).

The picture is blurry.

- Make sure the Input Signal is set correctly for your video equipment (see page 52).
- There may be dirt on the lens. Clean the lens as described on page 58.
- Adjust the focus (see page 26).
- Make sure the lens is not fogged by condensation. If you've just moved the projector from a cold environment, wait a couple of minutes before using it.
- Adjust the Sharpness setting (see page 40).
- If you're projecting from a computer, you may need to adjust the Tracking and Sync settings (see page 45).

The colors on the screen don't look right.

- Make sure the Input Signal is set correctly for your connected video equipment (see page 52).
- Press the Color Mode button on the remote control to select a different color mode (see page 31).
- Make sure your video cables are secure on both ends.
- Check the brightness and contrast settings (see page 38).
- Fine-tune the colors with the settings listed on page 41.
- If the picture looks dark, you may need to replace the lamp. Check the lamp usage timer to see how long the lamp has been in use (see page 66). Replace the lamp if it's close to the end of its service life (see page 62).

Solving Remote Control Problems

The projector doesn't respond to remote control commands.

- Make sure you're within about 32 feet (10 m) of the projector, and the remote control is aimed at the projector's front or back sensor within the ranges shown below.

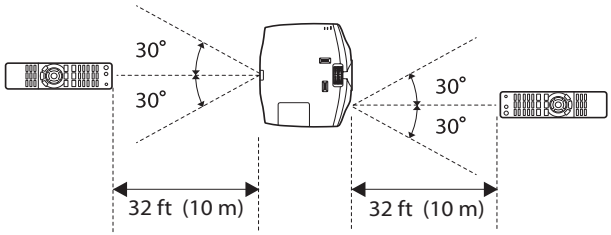

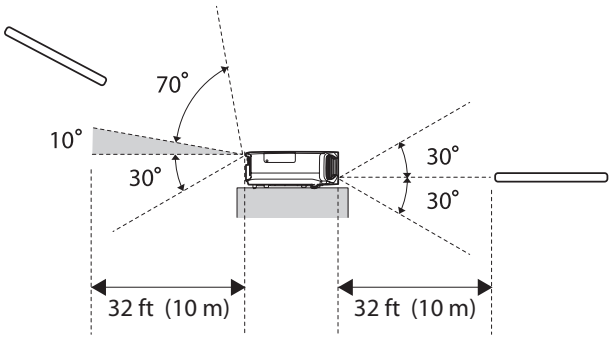

- You may need to replace the remote control batteries (see page 20). Press the illumination button and check if the buttons glow. If they don't, replace the batteries.
- Dim the room lights and turn off any fluorescent lights. Make sure the projector is not in direct sunlight.
- Turn off nearby equipment that emits infrared energy, such as a radiant room heater.
- Make sure there are no objects between the remote control and the IR receiver.

Where to Get Help

Internet Support

Epson provides technical assistance 24 hours a day at **epson.com/support** (U.S.) or **epson.ca/support** (Canada). Here you can access troubleshooting information, download product documentation, and receive technical advice through email.

Speak to a Support Representative

To use the Epson PrivateLine Support service, call **(800) 637-7661**. This is the fastest way of speaking to a live representative, and it's free. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period.

You may also speak with a projector support specialist by dialing **(562) 276-4394** (US) or **(905) 709-3839** (Canada), 6 AM to 8 PM, Pacific Time, Monday through Friday, and 7 AM to 4 PM, Pacific Time, Saturday.

Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Before you call, please have the following information ready:

- Product name (PowerLite Pro Cinema 6020UB)
- Product serial number (located on the bottom of the projector or in the projector's Info menu)
- Computer configuration, if you're connected to a computer
- Description of the problem

Purchase Supplies and Accessories

You can purchase screens, carrying cases, or other accessories from an authorized Epson reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766). To purchase online, visit **www.epsonstore.com** (U.S. sales) or **www.epson.ca** (Canadian sales).

Specifications

General

Type of display	Poly-silicon TFT active matrix
Size of LCD panels	0.74 inch (18.8 mm) wide
Lens	F=2.00 to 3.17
Resolution (native format)	1920 × 1080 pixels, 1080p
Brightness	Normal mode: White light output up to 2400 lumens (ISO 21118 standard) Color light output up to 2400 lumens
Dynamic contrast ratio	Up to 320,000:1 (Auto Iris on)
Image size	30 to 300 inches (0.76 to 7.62 m)
Projection distance	2.85 to 62.83 feet (0.87 to 19.15 m)
Zoom ratio	1 to 2.1
Aspect ratio	16:9 (supports 4:3 to 16:10)
Fan noise level	22 to 32 dB

Lamp

Note: Lamp life will vary depending on mode selected, environmental conditions, and usage. Brightness decreases over time.

Turn off this product when not in use to prolong the life of the projector.

Type	UHE (Ultra High Efficiency), E-TORL
Power consumption	230 W
Lamp life	4000 hours (Normal mode) 5000 hours (ECO mode)
Part number	V13H010L69

Remote Control

Range	Approximately 32 feet (10 m)
Batteries	AA × 2

Dimensions

Height	5.6 inches (140 mm), not including adjustable feet
Width	18.4 inches (466 mm)
Depth	15.6 inches (395 mm)
Weight	18.4 lb (8.3 kg)

Electrical

Rated frequency	50/60 Hz AC
Power supply	100 to 120 V AC: 3.7 A 200 to 240 V AC: 1.6 A
Power consumption	100 to 120 V AC: Operating: 357 W (Normal mode) 290 W (ECO mode) Standby: 0.30 W (with HDMI Link enabled) 220 to 240 V AC: Operating: 340 W (Normal mode) 278 W (ECO mode) Standby: 0.39 W (with HDMI Link enabled)

Environmental

Temperature	Operating: 41 to 95 °F (5 to 35 °C) Storage: 14 to 140 °F (–10 to 60 °C)
Humidity	Operating: 20 to 80% RH, non-condensing Storage: 10 to 90% RH, non-condensing
Operating altitude	Up to 7500 feet (2286 meters); over 4921 feet (1500 meters), enable High Altitude mode in the Operation menu (see page 53)

Safety

United States	FCC Part 15B Class B (DoC) UL60950-1 2nd edition

Canada	ICES-003 Class B CSA C22.2 No. 60950-1-07

Pixelworks DNX™ ICs are used in this projector.

Compatible Video Formats

The projector supports analog video in NTSC, PAL, and SECAM formats, and it automatically adjusts to the incoming signal. It can receive these formats as composite or component video—which it accepts through the Video and Component ports, respectively.

The projector also supports digital video (SDTV, HDTV) and various monitor display formats. Digital video is accepted by the HDMI and Component video ports. The PC port accepts analog RGB computer monitor signals.

If necessary, you can select a different Aspect setting to optimize the image. The resolution at which the image displays for a given setting depends on the currently active picture source, as listed in the following tables.

Composite video

Format	Refresh rate (Hz)	Resolution
NTSC	60	720 × 480
PAL	50/60	720 × 576
SECAM	50	720 × 576

Component video

Format/ Signal	Refresh rate (Hz)	Resolution
SDTV		
480i	60	720 × 480
576i	50	720 × 576
480p	60	720 × 480
576p	50	720 × 576
HDTV		
720p	50/60	1280 × 720
1080i	50/60	1920 × 1080
1080p	50/60	1920 × 1080

Analog RGB (computer display)

Signal	Refresh rate (Hz)	Resolution
VGA	60/72/75/85	640 × 480
SVGA	56/60/72/ 75/85	800 × 600
XGA	60/70/75/85	1024 × 768
SXGA	70/75/85 60/75/85 60/75/85	1152 × 864 1280 × 960 1280 × 1024
WXGA	60 60 60/75/85	1280 × 768 1360 × 768 1280 × 800

HDMI

Signal	Refresh rate (Hz)	Resolution
VGA	60	640 × 480
SDTV 480i 576i 480p 576p	 60 50 60 50	 720 × 480 720 × 576 720 × 480 720 × 576
HDTV 720p 1080i 1080p	 50/60 50/60 24/50/60	 1280 × 720 1920 × 1080 1920 × 1080

3D mode

Signal	Refresh rate (Hz)	Resolution
HDTV		
720p	50/60	1280 × 720
1080i	50/60	1920 × 1080
1080p	24/50/60	1920 × 1080

3D format

Signal	Refresh rate (Hz)	Resolution	3D Format
HDTV			
720p	50/60	1280 × 720	Frame Packing, Side by Side, Top and Bottom
1080i	50/60	1920 × 1080	Side by Side
1080p	50/60	1920 × 1080	Side by side
1080p	24	1920 × 1080	Frame Packing, Top and Bottom

ESC/VP21 Command Codes

You can use an AV controller with a 9-pin null modem serial cable to control the projector. You can download the complete *ESC/VP 21 Communication Manual* for home theater projectors from the Epson website at **epson.com/support** (U.S.) or **epson.ca/support** (Canada).

Notices

Important Safety Information

Follow these safety instructions when setting up and using the projector:

- Never look into the projector lens when the lamp is turned on; the bright light can damage your eyes. Never let children look into the lens when it is on.
- If you or any viewer experiences the following symptoms or other major discomfort from viewing 3D video images, immediately stop viewing and contact your health care provider: convulsions, eye or muscle twitching, loss of awareness, altered vision, involuntary movements, disorientation, eye strain, nausea/vomiting, dizziness, headaches, fatigue, or blurry/double vision that lasts longer than few seconds. Do not engage in any potentially hazardous activity (such as driving a vehicle or operating machinery) until your symptoms have completely gone away. If the symptoms persist, discontinue use and do not resume stereoscopic 3D viewing without discussing your symptoms with a health care provider / physician.
- Some viewers may experience a seizure or blackout when exposed to flashing images or lights contained in certain 3D content. Anyone who has a history of seizures, loss of awareness, symptoms linked to an epileptic condition, or has a family history of epilepsy, should contact a health care provider before using the 3D function. It is recommended that all viewers take regular breaks while watching 3D video images or playing stereoscopic 3D games. The suggested breaks are, at least 5 to 15 minutes after every 30 to 60 minutes of stereoscopic 3D content viewing.*

  *Based on the guidelines issued by the 3D Consortium revised December 10, 2008. The length and frequency of necessary breaks will vary from person to person. If you experience any discomfort, you should immediately stop watching the 3D video images or playing stereoscopic 3D games until the discomfort ends; consult a heath care provider / physician if necessary.
- Due to the possible impact on vision development, viewers of 3D video images should be age 6 or older. Children and teenagers may be more susceptible to health issues associated with viewing in 3D and should be closely supervised to avoid prolonged viewing without rest.
- Watching the screen while sitting too close for an extended period of time may cause eye strain. Consult your projector manual to determine the ideal viewing distance.
- Viewing 3D content may cause dizziness and disorientation for some viewers. Therefore, to avoid injury do not place your projector or screen near open stairwells, balconies, or wires, and do not sit near objects that could be broken if accidentally hit.

- The following people should limit 3D content viewing:
  People with a history of photosensitivity
  People with heart disease
  People in poor health
  People who are sleep deprived
  People who are physically tired
  People under the influence of drugs or alcohol
  Anyone who has ever experienced epileptic seizures or sensory disturbances triggered by flashing light effects
  SOME LIGHT PATTERNS MAY INDUCE SEIZURES IN PERSONS WITH NO PRIOR HISTORY OF EPILEPSY.
- Never open any cover on the projector, except the lamp and filter covers. Dangerous electrical voltages inside the projector can severely injure you.
- Except as specifically explained in this *User's Guide*, do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- The projector and its accessories come packaged in plastic bags. Keep plastic bags away from small children to avoid any risk of suffocation.
- Don't place the projector on an unstable cart, stand, or table. Also, don't use the projector near water or sources of heat.
- Use the type of power source indicated on the projector. If you're not sure of the power available, consult your dealer or power company.
- Place the projector near a wall outlet where the plug can be easily unplugged.
- Don't insert the plug into an outlet with dust present, and insert the plug firmly into the outlet. Failure to do so could result in sparks or fire.
- Don't overload wall outlets, extension cords, or integral convenience receptacles. This can cause fire or electric shock.
- Don't block the slots and openings in the projector case. They provide ventilation and prevent the projector from overheating. Don't operate the projector on a sofa, rug, or other soft surface, or in a closed-in cabinet unless proper ventilation is provided.
- Never push objects through the cabinet slots or spill liquid into the projector.
- Unplug the projector from the wall outlet and refer servicing to qualified service personnel under the following conditions: when the power cord or plug is damaged or frayed; if liquid has been spilled into the projector, or if it has been exposed to rain or water; if it doesn't operate normally when you follow the operating instructions, or if it exhibits a distinct change in performance, indicating a need for service; if it has been dropped or the housing has been damaged.
- Don't place the projector where the cord can be walked on. This may result in fraying or damage to the plug.
- Unplug the projector from the wall outlet before cleaning. Use a damp cloth for cleaning. Do not use liquid or aerosol cleaners.
- Ⓗg The lamp(s) in this product contain mercury. Please consult your state and local regulations regarding disposal or recycling. Do not put in the trash.

- Allow the lamp to cool for one hour before replacing it.
- Unplug the projector during lightning storms or when not in use for extended periods.
- Don't place the projector or remote control on top of heat-producing equipment.
- If you use the projector in a country other than where you purchased it, use the correct power cord for that country.
- Don't stand on the projector or place heavy objects on it.
- Don't use the projector outside of the required temperature range of 41 to 95 °F (5 to 35 °C). Doing so may cause an unstable display and could lead to projector damage.
- Don't store the projector outside of the required temperature range of 14 to 140 °F (–10 to 60 °C) or in direct sunlight for long periods of time. Doing so may cause damage to the case.

WARNING: The cords included with this product contain chemicals, including lead, known to the State of California to cause birth defects or other reproductive harm. ***Wash hands after handling.*** (This notice is provided in accordance with Proposition 65 in Cal. Health & Safety Code § 25249.5 and following.)

FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For Canadian Users

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le materiel brouilleur du Canada.

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this Epson product. Epson is not responsible for any use of this information as applied to other products.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

A Note Concerning Responsible Use of Copyrighted Materials

Epson encourages each user to be responsible and respectful of copyright laws when using any Epson product. While some countries' laws permit limited copying or reuse of copyrighted material in certain circumstances, those circumstances may not be as broad as some people assume. Contact your legal advisor for any questions regarding copyright law.

Trademarks

EPSON, PowerLite, and C²Fine are registered trademarks, and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

PrivateLine is a registered trademark, DigiScan and AccuCinema are trademarks, and Extra Care is a service mark of Epson America, Inc.

HDMI, the HDMI logo, and High-Definition Multimedia Interface are registered trademarks of HDMI Licensing, LLC.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2012 Epson America, Inc.

10/12
CPD-37758